

**121A00**

# Illustrated Parts List

## Model Series

# 121A00

TYPE NUMBERS  
0277.

### TABLE OF CONTENTS

Air Cleaner .....	7
Blower Housing/Shrouds .....	8
Cams .....	3
Carburetor .....	5
Controls .....	6
Crankcase Cover/Sump .....	2
Crankshaft .....	3
Cylinder .....	2
Flywheel .....	8
Fuel Tank .....	6
Governor Spring .....	6
Head .....	4
Ignition .....	6
Kits/Gaskets – Carburetor .....	5
Kits/Gaskets – Engine .....	2
Kits/Gaskets – Valve .....	4
Muffler .....	7
Oil Group .....	2
Piston Group .....	3
Rewind .....	8
Valves .....	4



PRINTED IN U.S.A.






COPYRIGHT by BRIGGS & STRATTON CORPORATION  
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

# 121A00


1019 LABEL KIT

1058 OWNER'S MANUAL

1330 REPAIR MANUAL

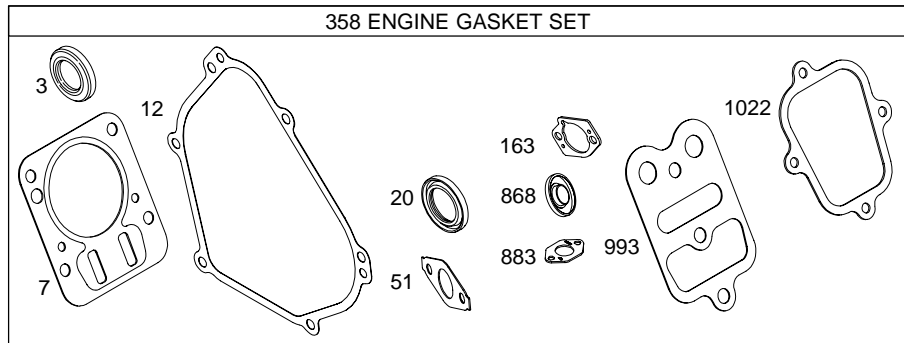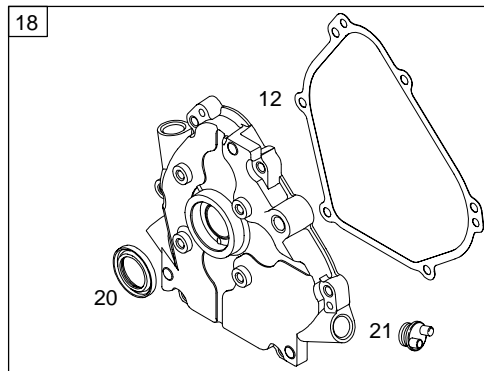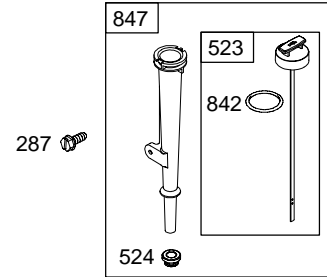
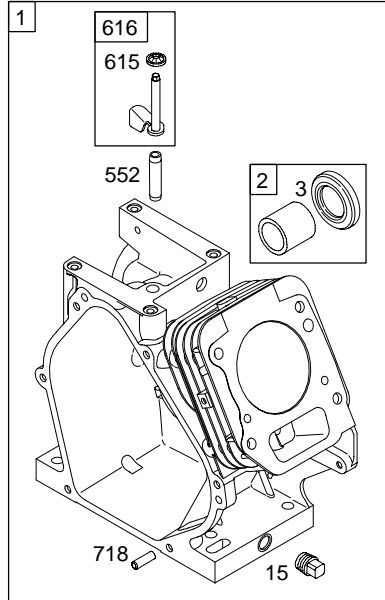
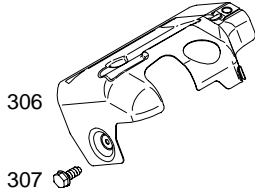


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.  
 5711-2 Assemblies include all parts shown in frames. 07/02/2003



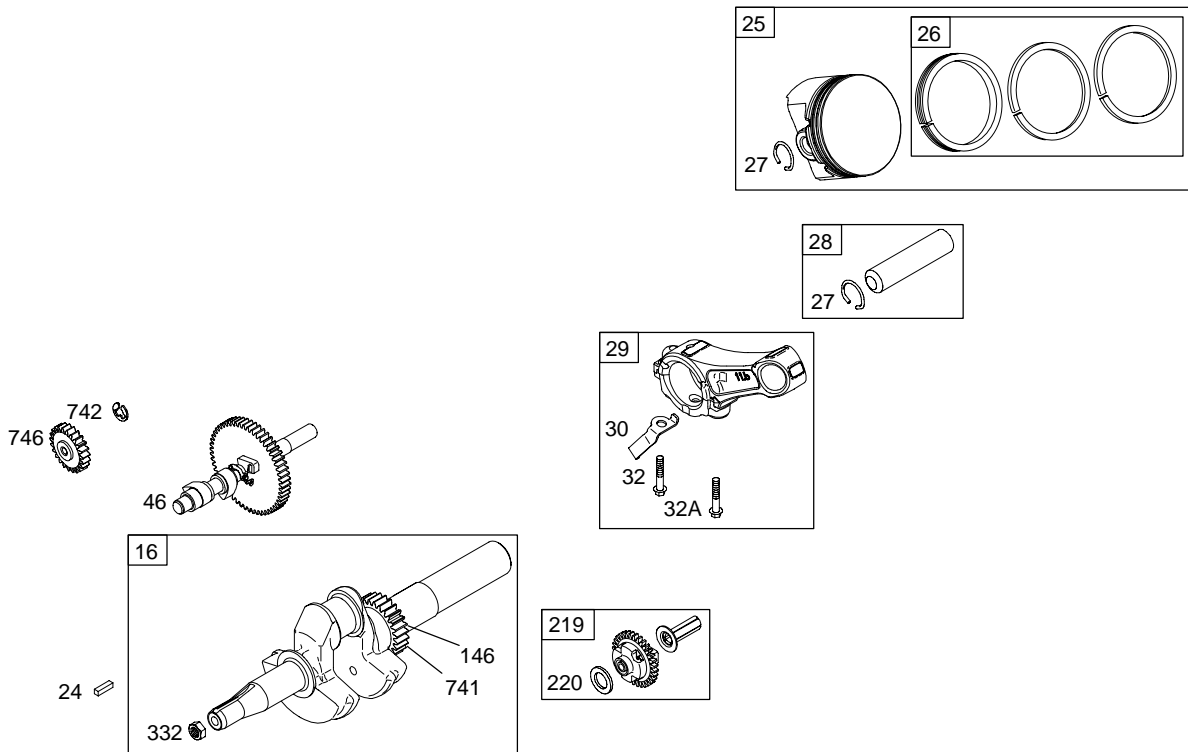


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.  
 5711-3 Assemblies include all parts shown in frames.

# 121A00

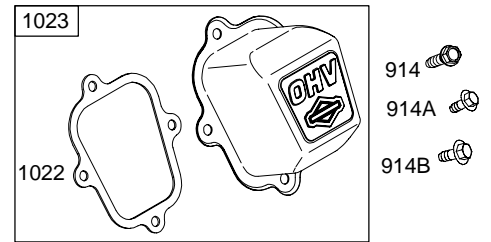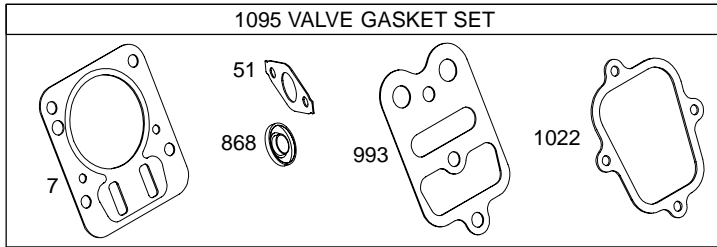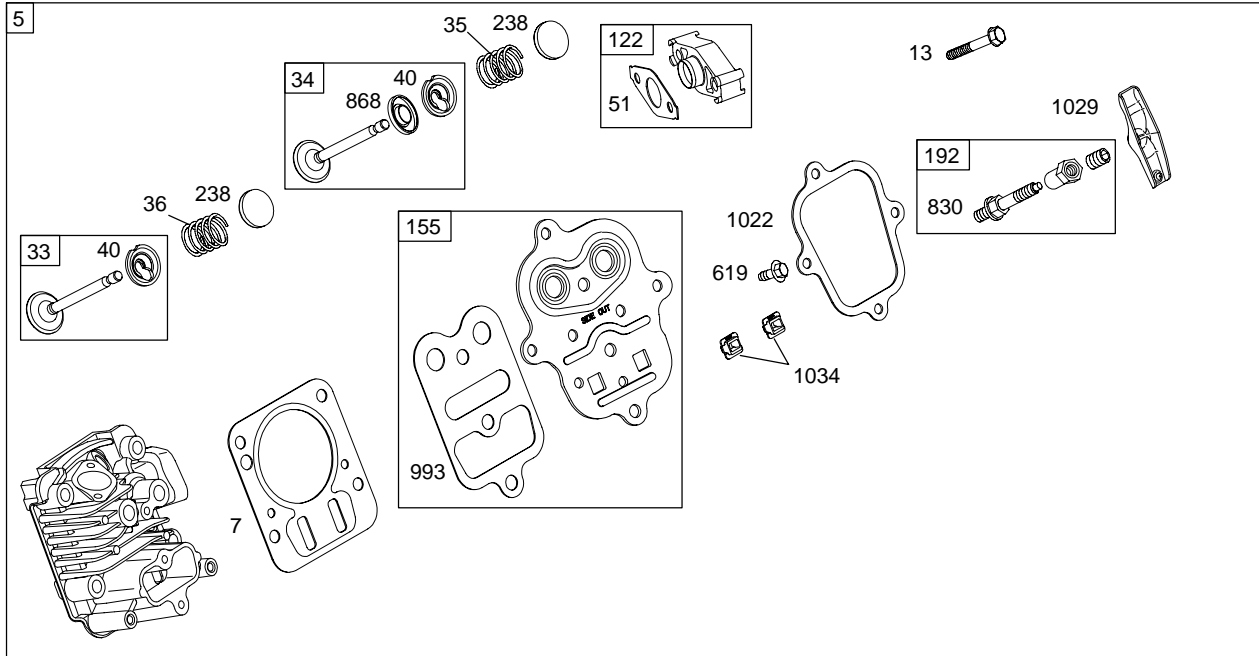


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.  
 5711-4 Assemblies include all parts shown in frames. 07/02/2003

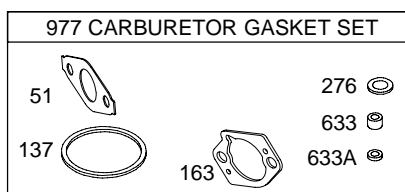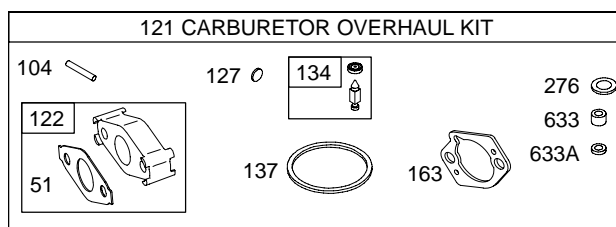
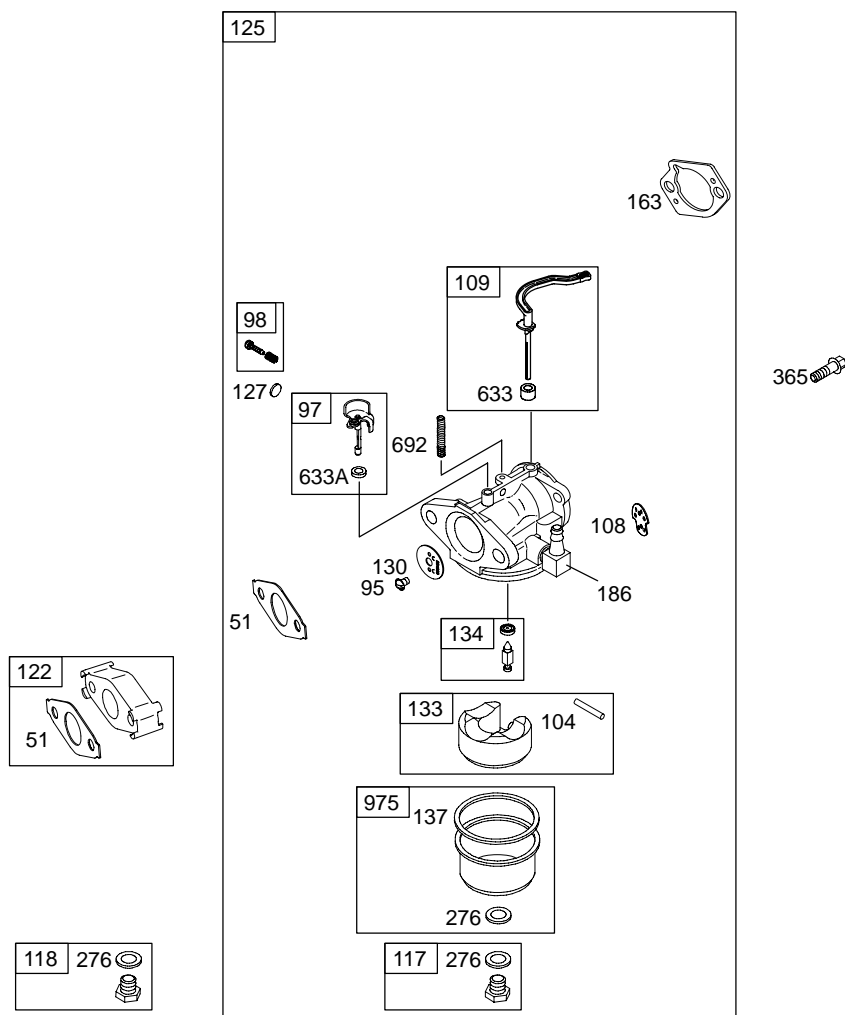


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.



# 121A00

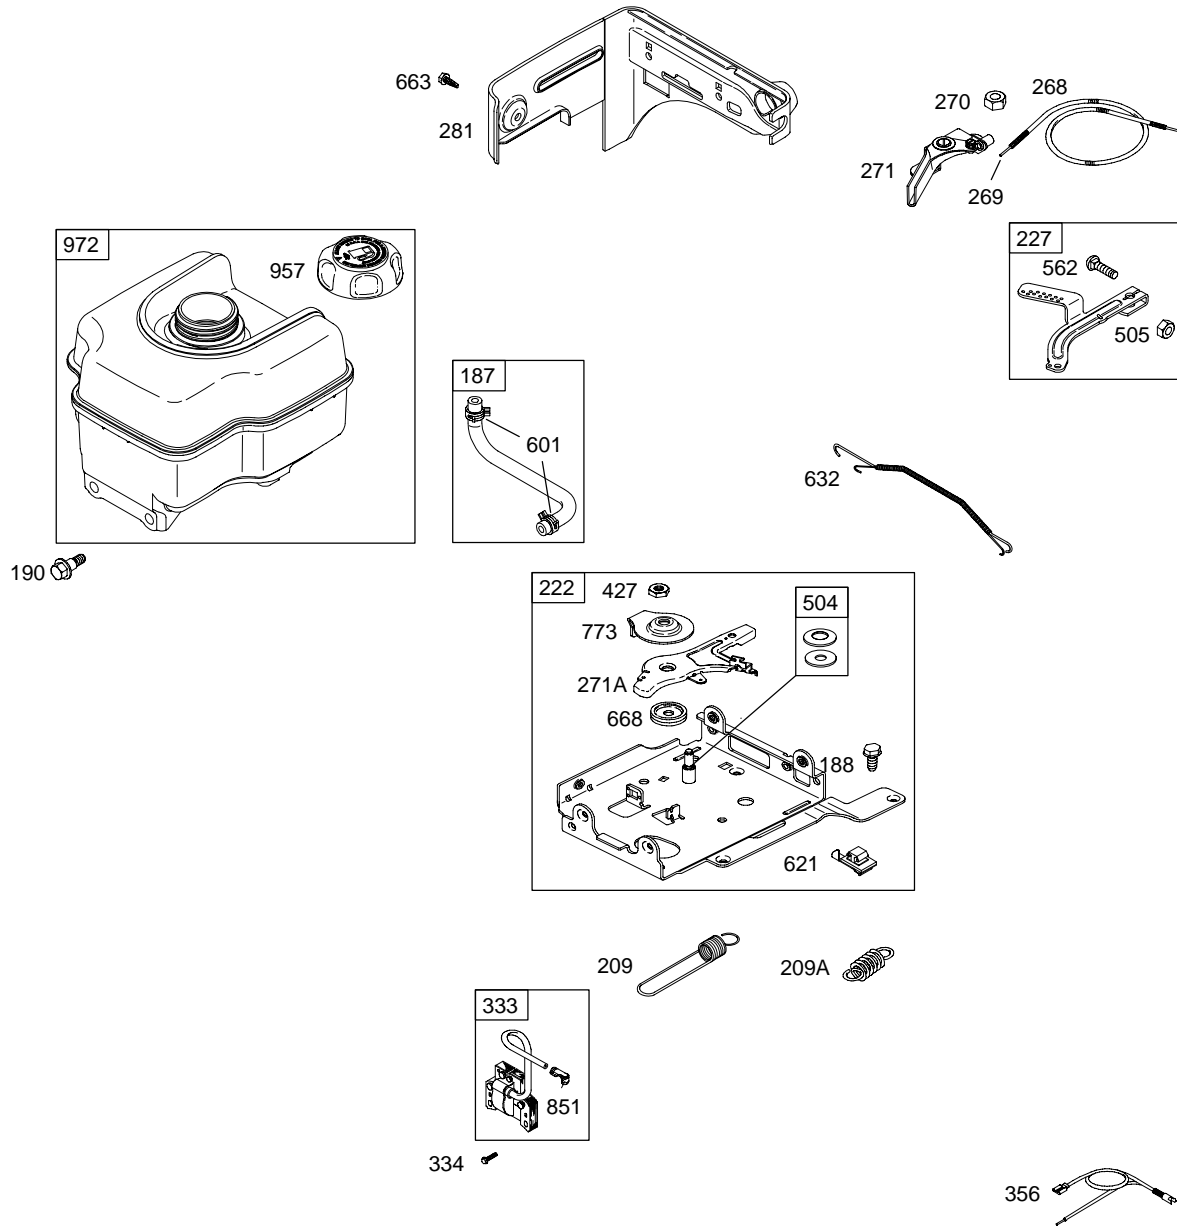

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.  
5711-6 Assemblies include all parts shown in frames. 07/02/2003

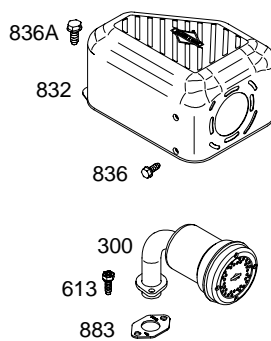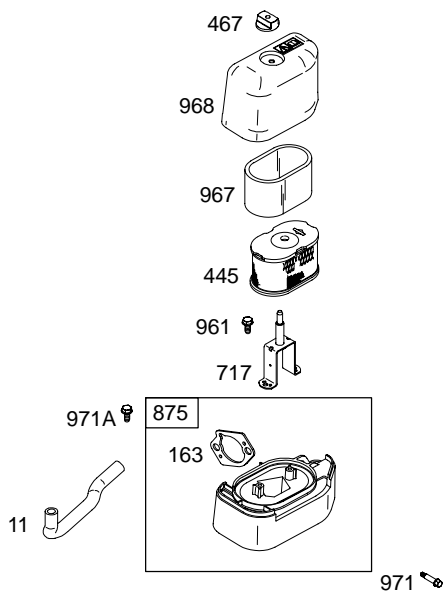

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.  
5711-7 Assemblies include all parts shown in frames.

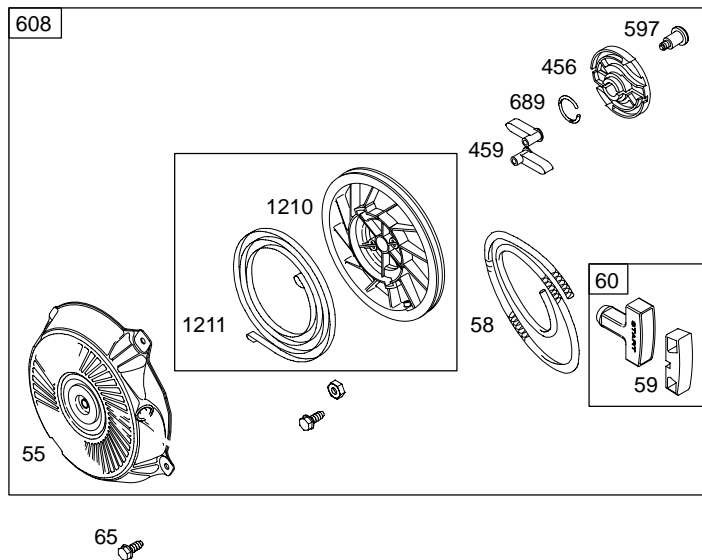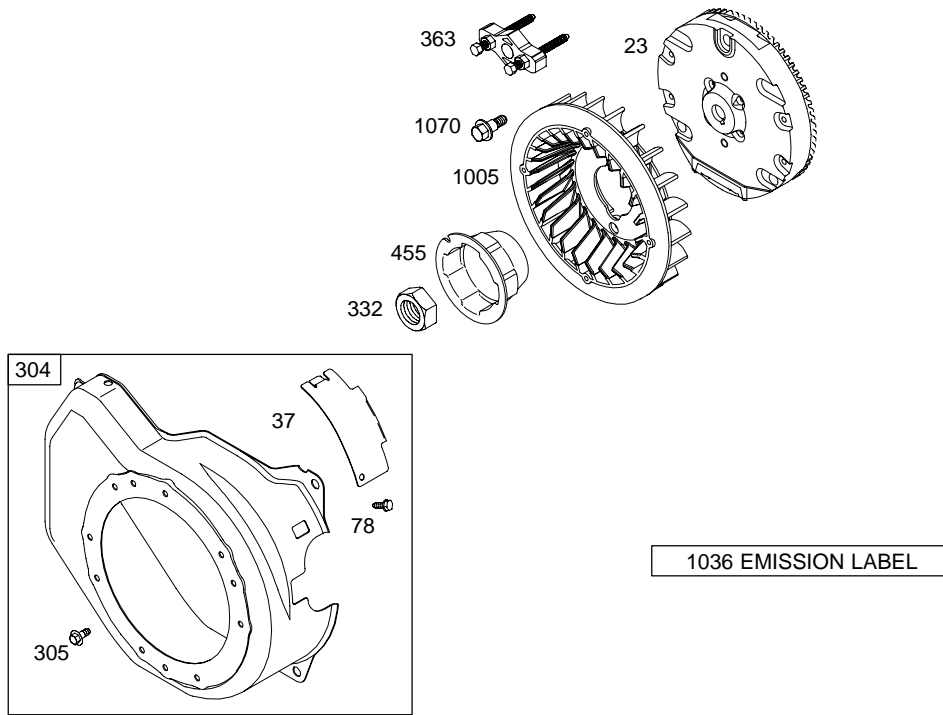

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	699505	Cylinder Assembly	58	693389	Rope–Starter	305	699480	Screw
2	399269	Kit–Bushing/Seal (Magneto Side)	59	805957	Insert–Grip			(Blower Housing)
3	★299819	Seal–Oil (Magneto Side)	60	691951	Grip–Starter Rope	306	693610	Shield–Cylinder
5	699486	Head–Cylinder	78	699205	Screw (Flywheel Guard)	307	699483	Screw (Cylinder Shield)
7	★∅698210	Gasket–Cylinder Head	95	691636	Screw (Throttle Valve)	332	699359	Nut (Flywheel)
11	693647	Tube–Breather	97	690024	Shaft–Throttle	333	695711	Armature–Magneto
12	★699485	Gasket–Crankcase	98	398185	Kit–Idle Speed	334	699477	Screw (Magneto Armature)
13	699482	Screw (Cylinder Head)	104	691242	Pin–Float Hinge	337	691043	Plug–Spark
15	691686	Plug–Oil Drain	108	692567	Valve–Choke	356	695814	Wire–Stop
15A	691682	Plug–Oil Drain	109	693628	Shaft–Choke	358	699638	Gasket Set–Engine
16	699452	Crankshaft	117	698344	Jet–Main (Standard)	363	19069	Puller–Flywheel
18	699596	Cover–Crankcase	118	694176	Jet–Main (High Altitude)	365	692568	Screw (Carburetor)
20	★692550	Seal–Oil (PTO Side)	121	696998	Kit–Carburetor Overhaul	383	19374	Wrench–Spark Plug
21	281658	Cap–Oil Fill	122	◆◆693749	Spacer–Carburetor	427	694255	Nut (Control Bracket)
22	699478	Screw (Crankcase Cover)	125	698475	Carburetor	445	697029	Filter–Air Cleaner Cartridge
23	699488	Flywheel	127	◆691739	Plug–Welch	455	692591	Cup–Flywheel
24	222698	Key–Flywheel	130	691181	Valve–Throttle	456	692299	Plate–Pawl Friction
25	499627	Piston Assembly (Standard)	133	398187	Float–Carburetor	459	281505	Pawl–Ratchet
		<b>Note</b>	134	398188	Kit–Needle/Seat	467	691668	Knob–Air Cleaner
		692789	137	◆◆693981	Gasket–Float Bowl	504	694254	Washer Set–Friction
		Piston Assembly (.020" Oversize)	146	690979	Key–Timing	505	691251	Nut (Governor Control Lever)
26	499631	Ring Set (Standard)	155	698214	Plate–Cylinder Head	523	693618	Dipstick
		<b>Note</b>	163	★◆696979	Gasket–Air Cleaner	524	281370	Seal–Dipstick Tube
		692786	186	692317	Hose–Connector	552	692346	Bushing–Governor Crank
		Ring Set (.020 " Oversize)	187	693401	Line–Fuel (Molded)	562	691112	Bolt (Governor Control Lever)
27	691866	Lock–Piston Pin	188	699479	Screw (Control Bracket)	597	691696	Screw (Pawl Friction Plate)
28	499423	Pin–Piston	190	699220	Screw (Fuel Tank)	601	95162	Clamp–Hose
29	690124	Rod–Connecting	192	694543	Adjustor–Rocker Arm	608	693394	Starter–Rewind
30	692562	Dipper–Connecting Rod	209	692571	Spring–Governor	613	699209	Screw (Muffler)
32	691664	Screw (Connecting Rod)	209A	691278	Spring–Governor	615	692576	Retainer–Governor Shaft
32A	695759	Screw (Connecting Rod)	219	693578	Gear–Governor	616	692547	Crank–Governor
33	499642	Valve–Exhaust	220	691724	Washer (Governor Gear)	619	699230	Screw (Cylinder Head)
34	499641	Valve–Intake	222	699589	Bracket–Control	621	692310	Switch–Stop
35	691304	Spring–Valve (Intake)	227	692573	Gear–Governor	632	693408	Spring/Link–Mechani- cal Governor
36	691304	Spring–Valve (Exhaust)	238	691300	Cap–Valve	633	◆693867	Seal–Choke/Throttle Shaft (Throttle)
37	699661	Guard–Flywheel	268	691025	Casing–Control Wire	633A	◆691321	Seal–Choke/Throttle Shaft (Choke)
40	692194	Retainer–Valve	269	691026	Wire–Control			
45	690977	Valve–Tappet	270	691027	Nut (Control Wire Casing)			
46	696813	Camshaft	271	691028	Lever–Control			
51	★◆∅692555	Gasket–Intake (2 Required)	271A	694256	Lever–Control			
55	691422	Housing–Rewind Starter	276	271716	Washer–Sealing			
			281	699639	Plate–Trim			
			287	699629	Screw (Dipstick Tube)			
			300	693593	Muffler			
			304	699598	Housing–Blower			

★ Included in Engine Gasket Set–Ref. No.358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

◆ Included in Carburetor Gasket Set–Ref. No. 977.

∅ Included in Valve Gasket Set–Ref. No 1095.

**Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**

# 121A00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
635	692076	Boot-Spark Plug	868	692044	Seal-Valve	975	493640	Bowl-Float
663	699206	Screw (Control Panel)	875	697030	Base-Air Cleaner	977	697001	Gasket Set-Carburetor
668	694257	Spacer	883	★691893	Gasket-Exhaust	993	694088	Gasket-Cylinder Head Plate
689	691855	Spring-Friction	914	699481	Screw (Rocker Cover) (Bottom)	1005	692592	Fan-Flywheel
692	690572	Spring-Detent	914A	692557	Screw (Rocker Cover) (Top)	1019	694852	Kit-Label
717	693462	Bracket-Air Cleaner	914B	697551	Screw (Rocker Cover) (Center)	1022	691890	Gasket-Rocker Cover
718	690959	Pin-Locating	957	694261	Cap-Fuel Tank	1023	499924	Cover-Rocker
741	695087	Gear-Timing	961	698304	Screw (Air Cleaner Bracket)	1026	693517	Rod-Push
742	692564	Ring-Retaining	967	273356	Filter-Pre Cleaner	1029	691230	Arm-Rocker
746	692566	Gear-Idler	968	693460	Cover-Air Cleaner	1034	691343	Guide-Push Rod
773	694258	Retainer	971	690349	Screw (Air Cleaner Base)	1036	697004	Label-Emissions
830	694544	Stud-Rocker Arm	971A	699629	Screw (Air Cleaner Base)	1058	275092	Owner's Manual
832	693583	Guard-Muffler	972	694260	Tank-Fuel	1070	699201	Screw (Flywheel Fan)
836	699203	Screw (Muffler Guard)				1095	698215	Gasket Set-Valve
836A	699632	Screw (Muffler Guard)				1210	498144	Pulley/Spring Assem- bly (Pulley)
842	691031	Seal-O Ring (Dipstick Tube)				1211	498144	Pulley/Spring Assem- bly (Spring)
847	693617	Dipstick/Tube Assembly				1330	272147	Repair Manual
851	493880	Terminal-Spark Plug						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

∅ Included in Valve Gasket Set-Ref. No 1095.

**Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**

5711-10

Assemblies include all parts shown in frames.

07/02/2003