

**123J00**

# Illustrated Parts List

## Model Series

# 123J00

TYPE NUMBERS  
0100 through 0188.

### TABLE OF CONTENTS


Alternator .....	8
Air Cleaner .....	4
Blower Housing/Shrouds .....	6
Brake .....	8
Cams .....	2
Carburetor .....	3
Controls .....	5
Crankcase Cover/Sump .....	2
Crankshaft .....	2
Cylinder Group .....	2
Electric Starter .....	8
Electrical .....	8
Flywheel .....	7
Fuel Tank .....	5
Governor Spring .....	5
Ignition .....	8
Kits/Gaskets .....	2 & 3
Muffler .....	4
Oil .....	2
Piston Group .....	2
Rewinds .....	7
Valves .....	2






PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION  
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

# 123J00






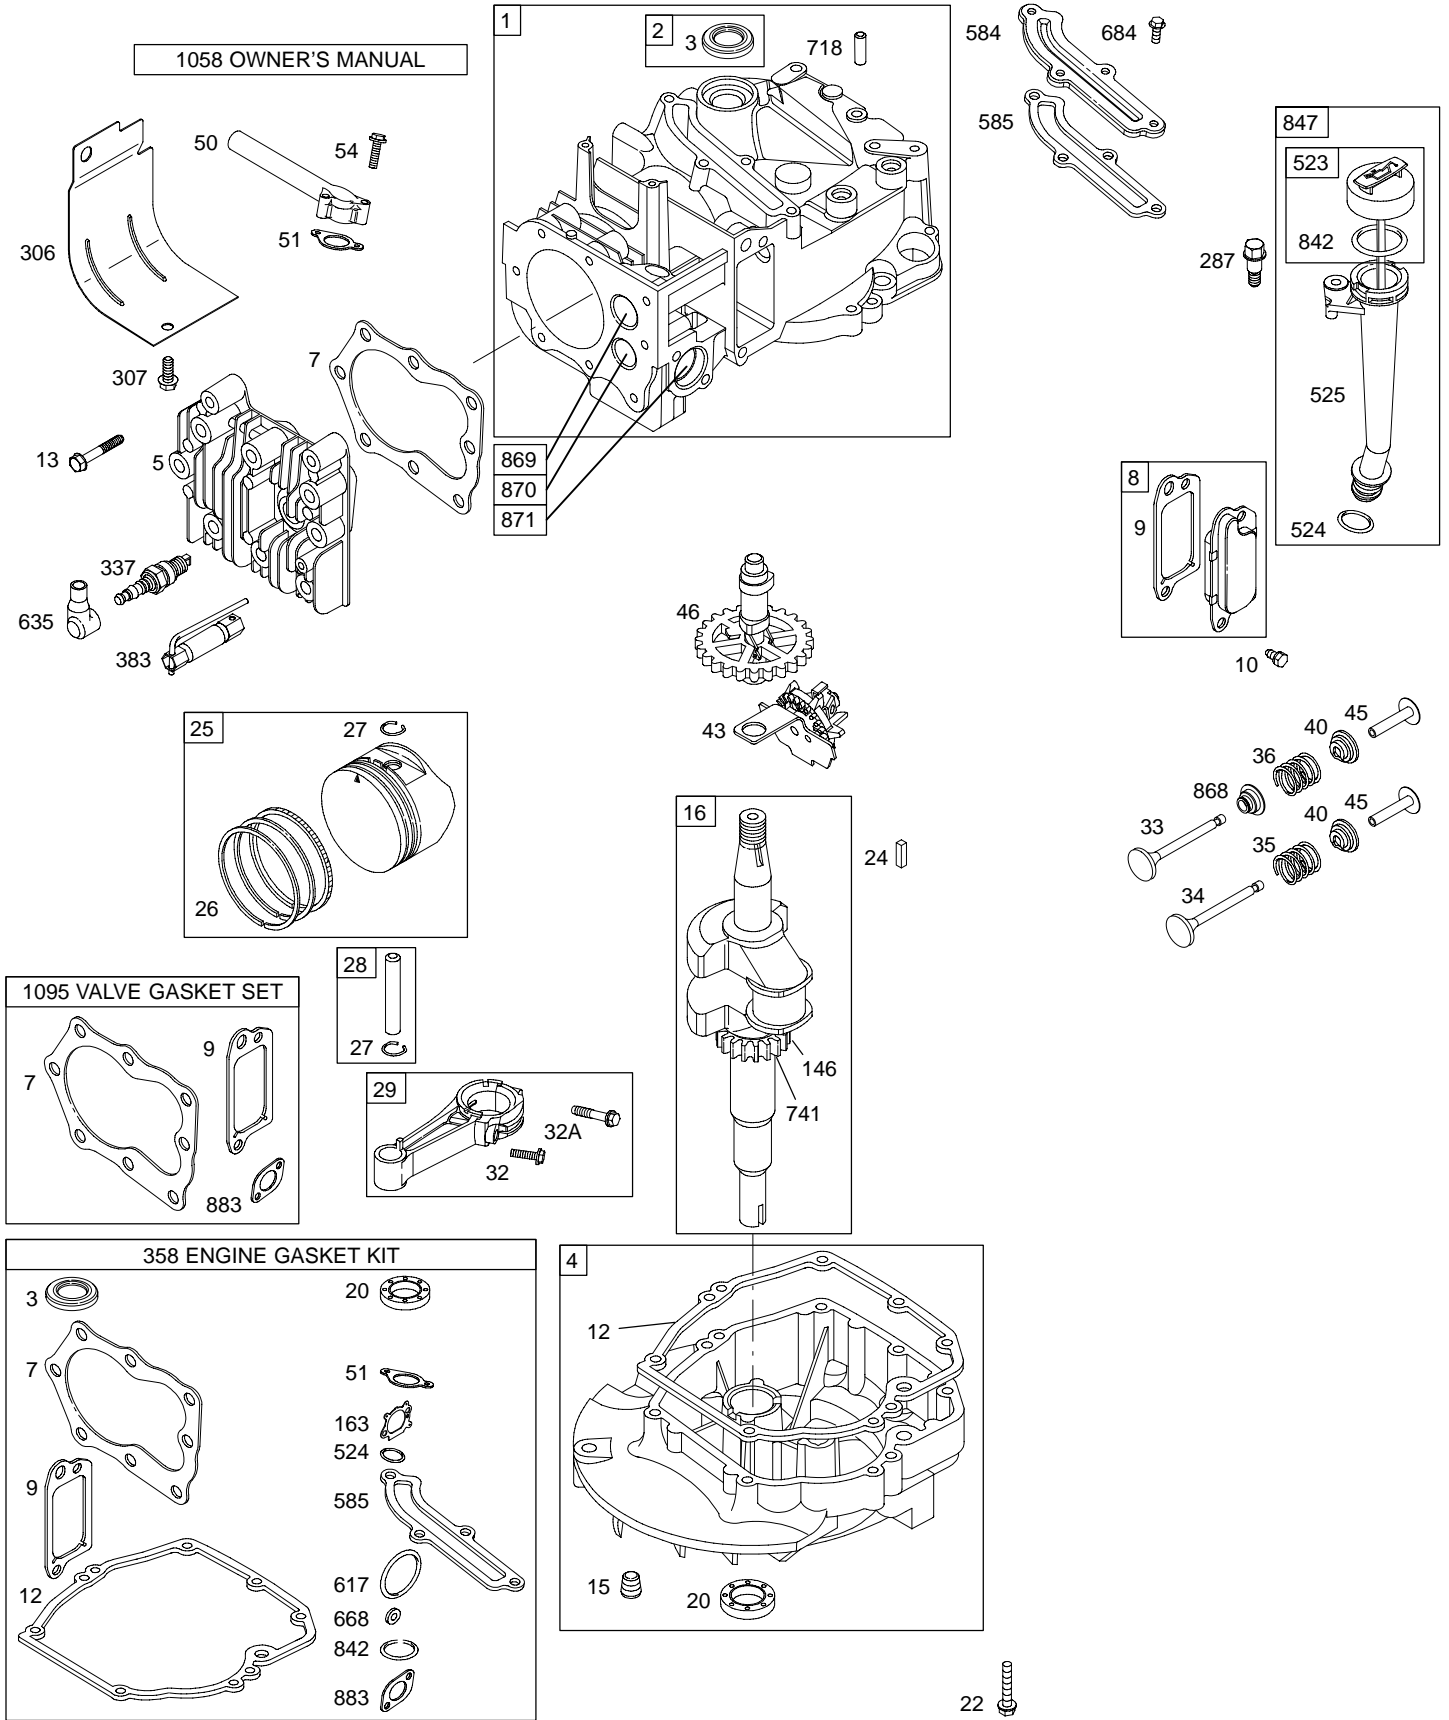


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.





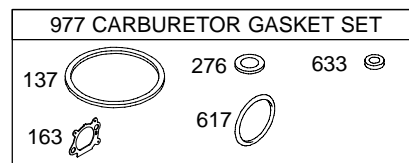
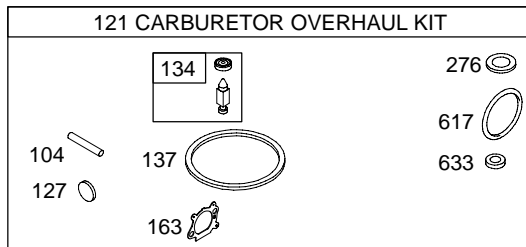
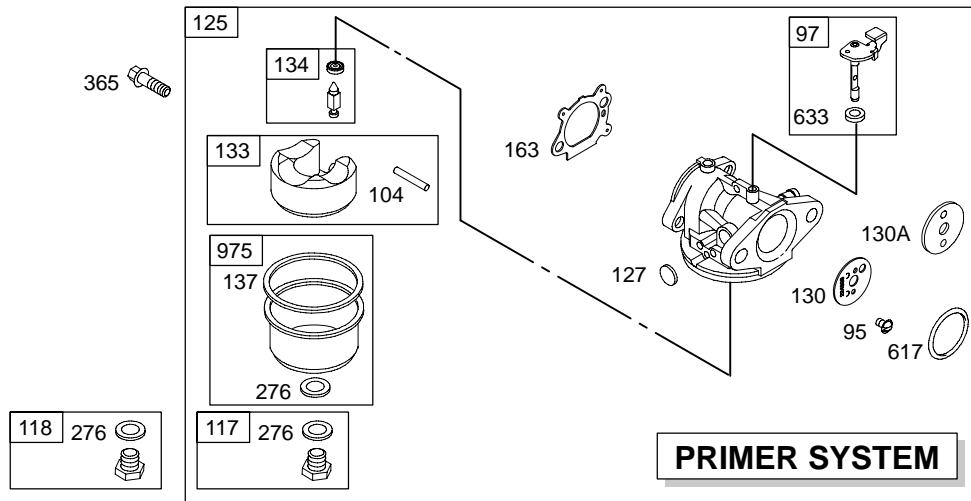


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.  
 5117-3 Assemblies include all parts shown in frames. 06/19/2003

# 123J00

 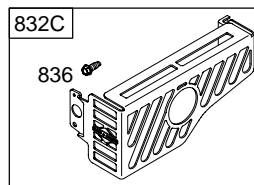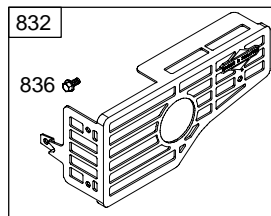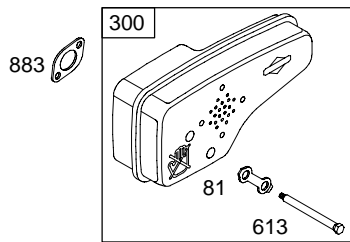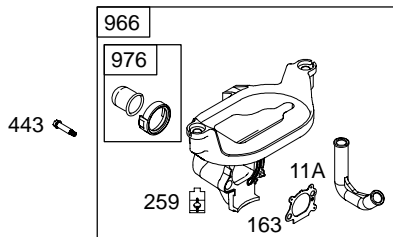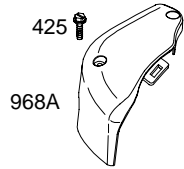



Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.  
5117-4 Assemblies include all parts shown in frames. 06/19/2003

  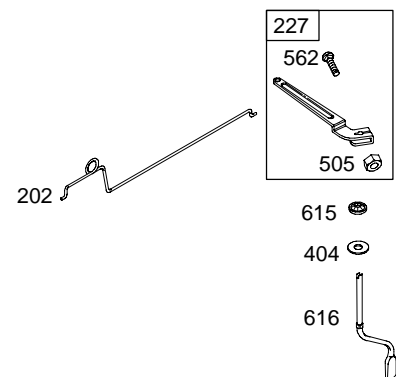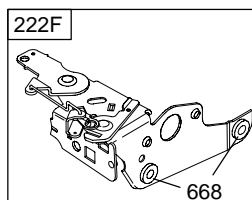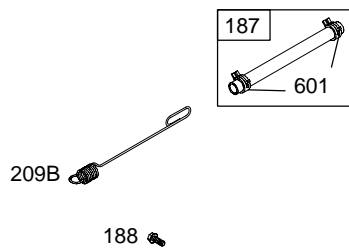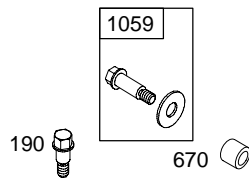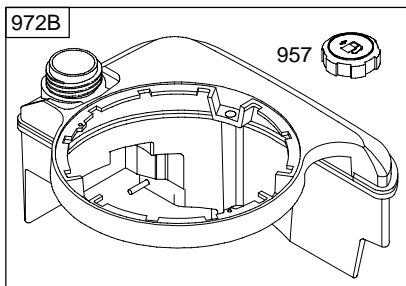





Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.  
 5117-5 Assemblies include all parts shown in frames. 06/19/2003

# 123J00

---



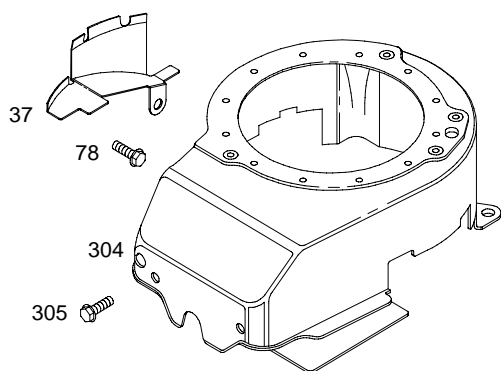
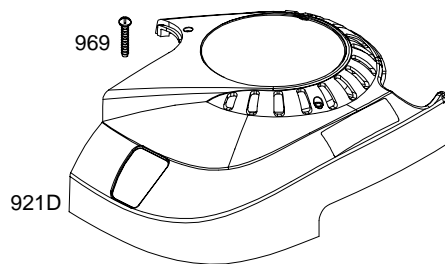


**Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**

 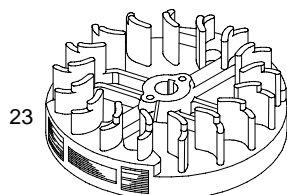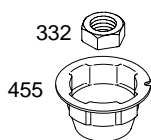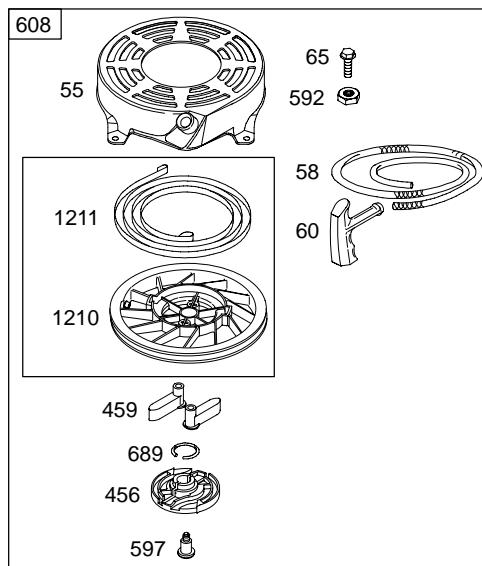

5117-7 *Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.* Assemblies include all parts shown in frames.

# 123J00

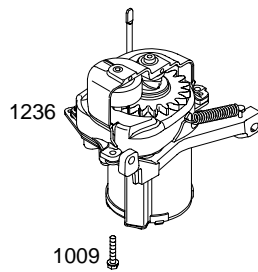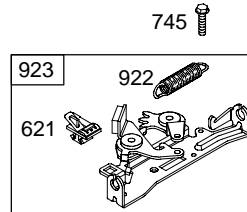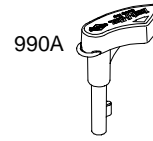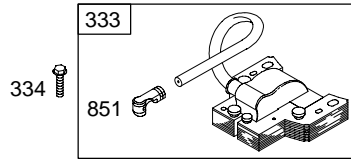

5117-8 *Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.* Assemblies include all parts shown in frames.

06/19/2003

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	
1	697322	Cylinder Assembly	25	697339	Piston Assembly (Standard)	50	497465	Manifold-Intake	
2	399269	Kit-Bushing/Seal (Magneto Side)			———— <b>Note</b> ————	51	★272199	Gasket-Intake	
3	★299819	Seal-Oil (Magneto Side)			697340		691650	Screw (Intake Manifold)	
4	493279	Sump-Engine			Assembly (.010" Oversize)	55	691421	Housing-Rewind Starter	
		———— <b>Note</b> ————			697341		58	692259	Rope-Starter (Cut To Required Length)
		696294			Assembly (.020" Oversize)	60	281434	Grip-Starter Rope	
5	691160	Head-Cylinder			697342		65	690837	Screw (Rewind Starter)
7	★∅692249	Gasket-Cylinder Head	26	499425	Ring Set (Standard)	78	691108	Screw (Flywheel Guard)	
8	695250	Breather Assembly			———— <b>Note</b> ————	81	691740	Lock-Muffler Screw	
9	★∅696125	Gasket-Breather			499426		95	691636	Screw (Throttle Valve)
10	691125	Screw (Breather Assembly)			(.010" Oversize)	97	493267	Shaft-Throttle (Metal)	
11A	691934	Tube-Breather			499427			———— <b>Note</b> ————	
12	★692232	Gasket-Crankcase			(.020" Oversize)			696565	Shaft-Throttle (Plastic)
13	690912	Screw (Cylinder Head)	27	691866	Lock-Piston Pin	104	●691242	Pin-Float Hinge	
15	691680	Plug-Oil Drain (Square Socket)	28	499423	Pin-Piston (Standard)	117	494870	Jet-Main (Standard) (Used After Code Date 02092900).	
16	691451	Crankshaft	29	499424	Rod-Connecting (Standard)			———— <b>Note</b> ————	
		———— <b>Note</b> ————	32	691664	Screw (Connecting Rod)			498975	Jet-Main (Standard) (Used Before Code Date 02093000).
		691450			32A				
		Crankshaft (Used on Type No(s). 0100.	33	262651	Valve-Exhaust				
20	★399781	Seal-Oil (PTO Side)	34	262652	Valve-Intake	118	497315	Jet-Main (High Altitude) (Used After Code Date 02092900).	
22	691092	Screw (Crankcase Cover/Sump)	35	691270	Spring-Valve (Intake)			———— <b>Note</b> ————	
23	692315	Flywheel (Rewind Start)	36	691270	Spring-Valve (Exhaust)			496495	Jet-Main (High Altitude) (Used Before Code Date 02093000).
		———— <b>Note</b> ————	37	694086	Guard-Flywheel				
		696291	40	692194	Retainer-Valve				
		Flywheel (Used on Type No(s). 0188.	43	691997	Slinger-Governor/Oil				
24	222698	Key-Flywheel	45	690548	Tappet-Valve				
			46	691449	Camshaft				

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

∅ Included in Valve Gasket Set-Ref. No 1095.

**Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**

# 123J00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
121	498260	Kit-Carburetor Overhaul	268	691072	Casing-Control Wire (Cut to Required Length)	443	690349	Screw (Air Cleaner Primer Base)
125	498966	Carburetor (Primer System)	269	691589	Wire-Control (Cut to Required Length)	445	497725	Filter-Air Cleaner Cartridge
127	●694468	Plug-Welch	270	691027	Nut (Control Wire Casing)	455	695161	Cup-Flywheel
130	691203	Valve-Throttle	271	691028	Lever-Control	456	692299	Plate-Pawl Friction
		<b>Note</b>	276	◆271716	Washer-Sealing (Main Jet)	459	281505	Plate-Ratchet
		696564 Valve-Throttle (Used With Plastic Throttle Shaft)	287	690940	Screw (Dipstick Tube)	505	691251	Nut (Governor Control Lever)
133	398187	Float-Carburetor	300	692038	Muffler (Super Lo Tone)	523	495264	Dipstick
134	●398188	Kit-Needle/Seat	304	695892	Housing-Blower	524	★692296	Seal-Dipstick Tube
137	◆693981	Gasket-Float Bowl			<b>Note</b>	525	495265	Tube-Dipstick
146	690979	Key-Timing			696298 Housing-Blower (Used on Type No(s). 0188.)	562	92613	Bolt (Governor Control Lever)
163	★◆272653	Gasket-Air Cleaner	305	691108	Screw (Blower Housing)	584	692342	Cover-Breather Passage
187	691050	Line-Fuel (Cut to Required Length)	306	690450	Shield-Cylinder	585	★691879	Gasket-Breather Passage
187C	696292	Line-Fuel (Molded)	307	690345	Screw (Cylinder Shield)	592	690800	Nut (Rewind Starter)
188	693399	Screw (Control Bracket)	332	690662	Nut (Flywheel)	597	691696	Screw (Pawl Friction Plate)
190	690940	Screw (Fuel Tank)	333	802574	Armature-Magneto	601	95162	Clamp-Hose
202	691829	Link-Mechanical Governor	334	691061	Screw (Magneto Armature)	601A	691038	Clamp-Hose
209B	699056	Spring-Governor	337	802592	Plug-Spark	608	497680	Starter-Rewind
222F	691436	Bracket-Control (Remote/Manual Friction)(Compliance)	356	692390	Wire-Stop	613	691340	Screw (Muffler)
		<b>Note</b>	358	497316	Gasket Set-Engine	615	690340	Retainer-Governor Shaft
		698163 Bracket-Control (Used on Type No(s). 0188.)	363	19069	Flywheel Puller	616	698801	Crank-Governor
227	690783	Lever-Governor Control	365	692524	Screw (Carburetor)	617	★◆270344	Seal-O Ring (Intake Manifold)
259	691189	Bracket-Casing Clamp	383	89838	Wrench-Spark Plug	621	692310	Switch-Stop
265	690798	Clamp-Casing	404	690272	Washer (Governor Crank)	633	◆691321	Seal-Choke/Throttle Shaft (Throttle)
267	691044	Screw (Casing Clamp)	425	691135	Screw (Air Cleaner Cover)	635	66538	Boot-Spark Plug

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

⊘ Included in Valve Gasket Set-Ref. No 1095.

**Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
668	★493823	Spacer (Includes 2)	871	262001	Bushing–Valve Guide (Exhaust)	975	493640	Bowl–Float
670	692294	Spacer–Fuel Tank			<b>Note</b> _____	976	694395	Primer–Carburetor
684	690345	Screw (Breather Passage Cover)			63709 Bushing–Valve Guide (Intake)	977	498261	Gasket Set–Carburetor
689	691855	Spring–Friction	883	★∅691881	Gasket–Exhaust	990A	695951	Key Set
718	690959	Pin–Locating	921D	691339	Cover–Blower Housing	1009	696255	Screw (Starter Motor)
741	691830	Gear–Timing	922	692135	Spring–Brake	1036	697457	Emission Label
745	691648	Screw (Brake)	923	695891	Brake	1058	275177	Manual–Owner's <b>Note</b> _____
832	499034	Guard–Muffler	957	397974	Cap–Fuel Tank (Plastic) (Black)			275054 Manual– Owner's (Touch N Mow)
832C	691442	Guard–Muffler	966	691439	Base–Air Cleaner Primer	1059	692311	Kit–Screw/Washer
836	690664	Screw (Muffler Guard)	968A	498997	Cover–Air Cleaner	1095	498528	Gasket Set–Valve
842	★691031	Seal–O Ring (Dipstick Tube)	969	690700	Screw (Blower Housing Cover)	1210	498144	Pulley/Spring Assembly (Pulley)
847	692017	Dipstick/Tube Assembly	972B	495224	Tank–Fuel (Plastic)	1211	498144	Pulley/Spring Assembly (Spring)
851	493880	Terminal–Spark Plug			<b>Note</b> _____	1236	695959	Starter–Mechanical (Touch N Mow) (Do Not Service Individual Parts, Only As A Whole)
868	697338	Seal–Valve			695960 Tank–Fuel (Plastic) Used on Type No(s). 0188.			
869	691155	Seat–Valve (Intake)						
870	690380	Seat–Valve (Exhaust)						

★ Included in Engine Gasket Set–Ref. No.358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

◆ Included in Carburetor Gasket Set–Ref. No. 977.

∅ Included in Valve Gasket Set–Ref. No 1095.

**Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**