



**▲ WARNING**  
All repairs, adjustments  
and maintenance not de-  
scribed in the Operator's  
Manual must be per-  
formed by qualified serv-  
ice personnel.

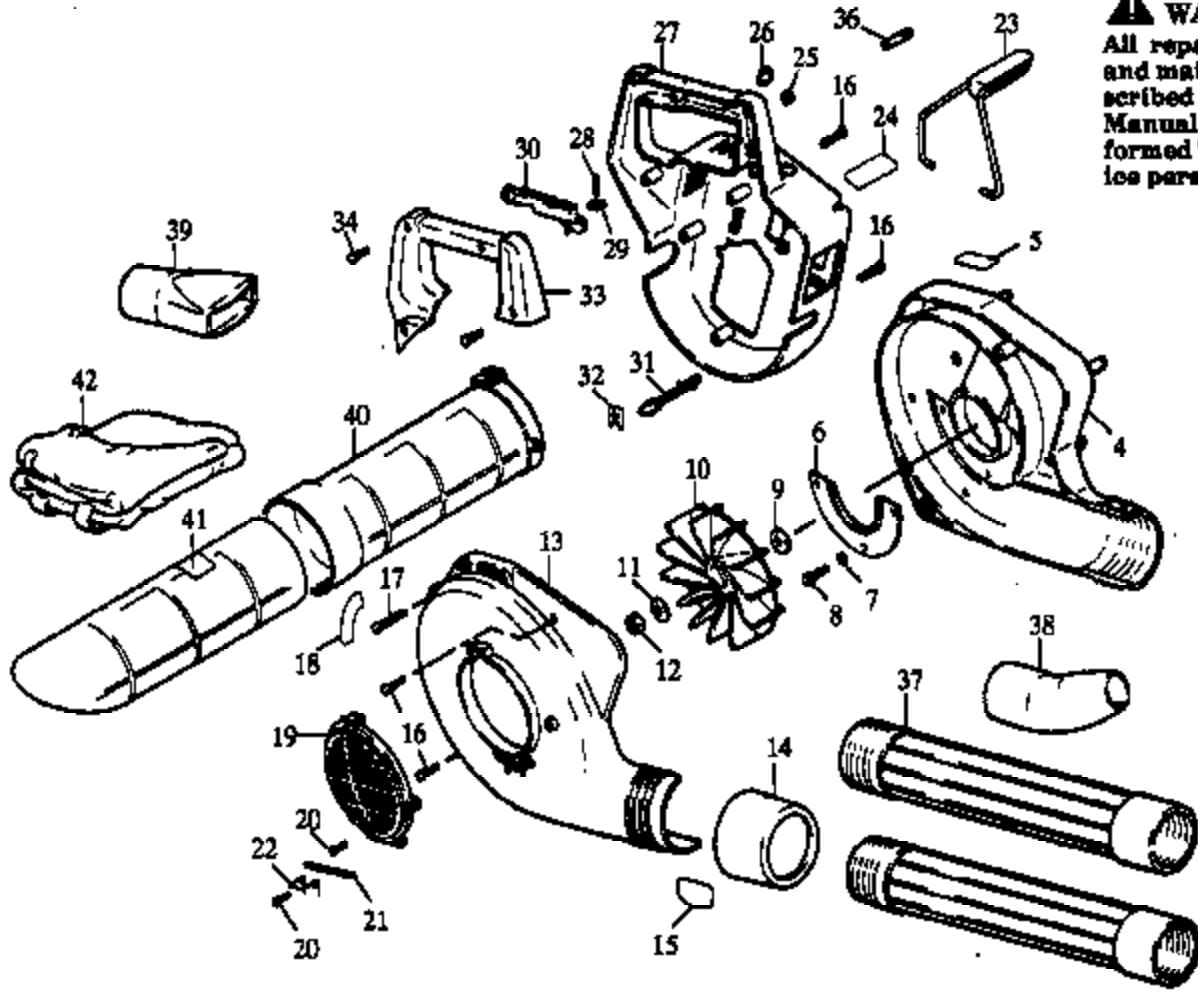


Ref #	Part Number	Qty	Description
4	534727102		Main Support Housing
5	534744500		Starting Instructions Decal
6	534727000		Engine Mount Plate
7	534713000		Lockwasher
8	534744300		Screw
9	534136100		Washer
10	534726700		Impeller Ass'y.
11	534120387		Washer
12	534754500		Nut
13	534727202		Inlet Cover Housing
14	534408405		Sleeve
15	534744700		Exhaust Label (Model GB150)
15	534727300	GB150 Gas Blower Page 2 of 7	Exhaust Label (Model GB350)
16	534222401	BLOWER ASSEMBLY	Screw
17	534174506		Screw
18	534755500		Caution Label (Not a serviceable part)
19	534543305		Inlet Cover
20	534193700		Screw
21	534327201		Hinge Pin
22	534475900		Spring Return
23	534741000		Assist Handle Ass'y.
24	534727800		Nameplate Label
25	534371301		Nut
26	534744400		Split Ring
27	534726602		Engine Cover Housing
28	534729500		Screw
29	534728000		Nut
30	534755800		Throttle Trigger Ass'y.
31	534727905		Tickler Lever
32	534741400		Nut
33	534733002		Handle Cover Housing
34	534184700		Screw
36	534756900		Eye Nut
37	534352705		Outlet Tube
38	534373405		Concentrator Nozzle
39	534339405		Nozzle Diffuser (Model GB350)
40	534528705		Vacuum Tube (Model GB350)
41	534506400		Nameplate Label (Model GB350) (Not a serviceable part)
42	534339900		Vacuum Bag (Model GB350)
	534885560		Operator's Manual

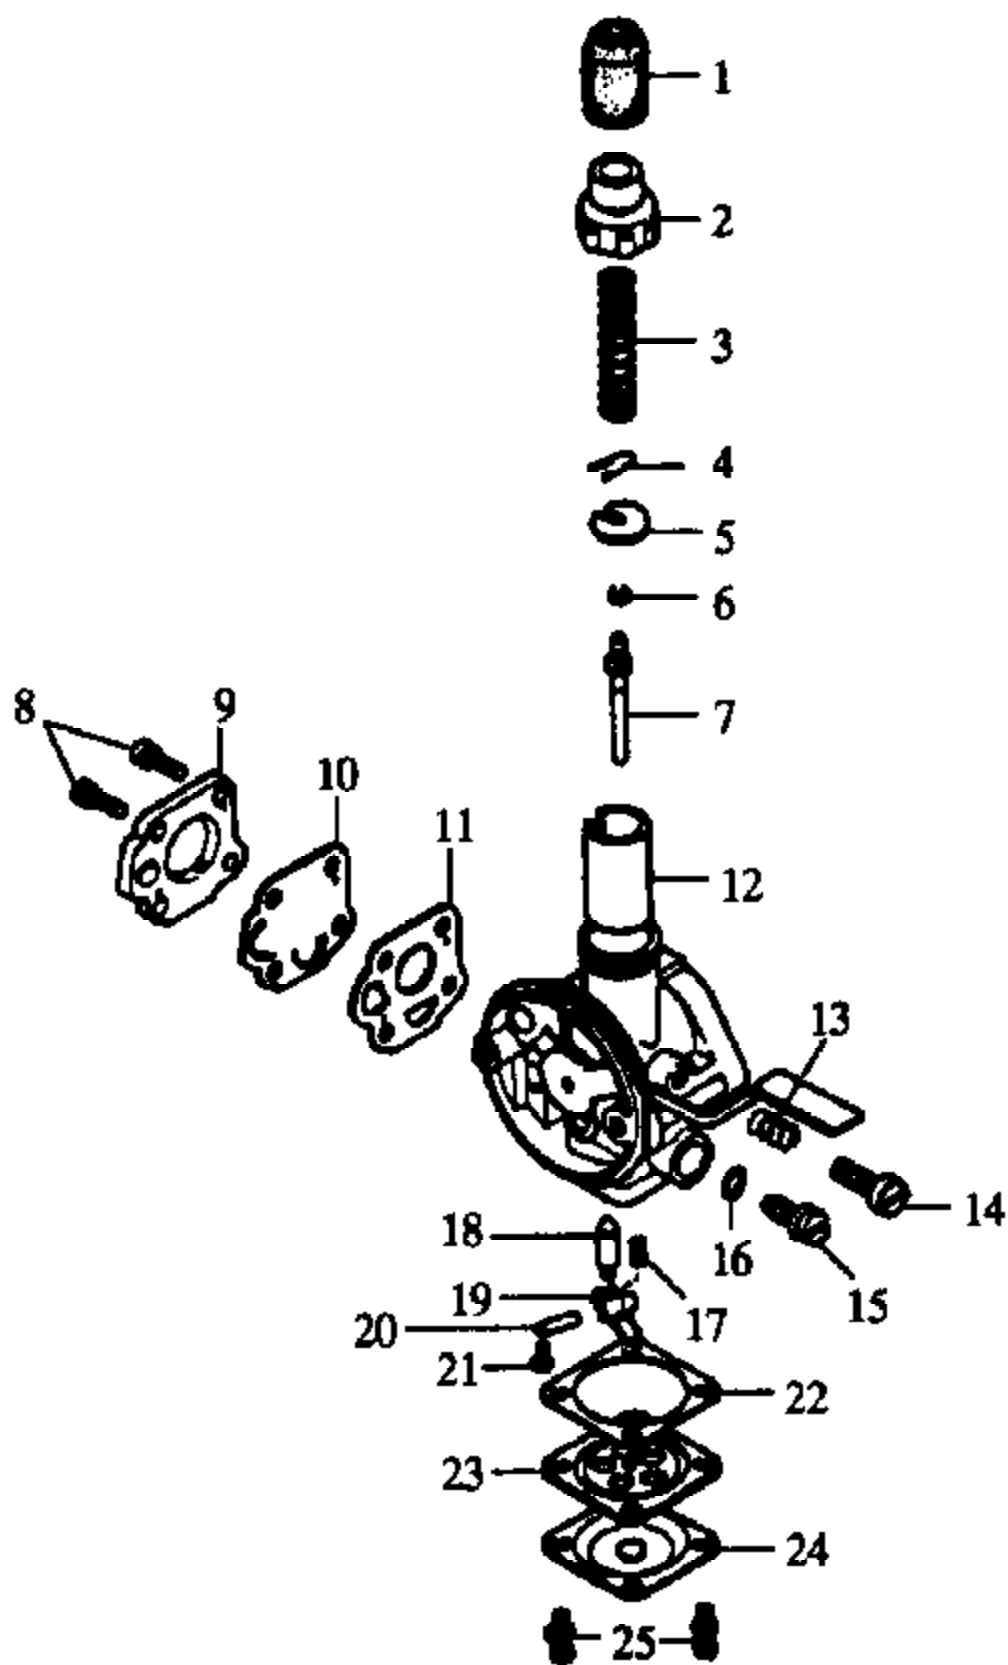

Ref #	Part Number	Qty	Description
1	534752200		Rubber Cap
2	534748800		Mixing Chamber Cap
3	534747000		Throttle Spring
4	534749800		Needle Clip
5	534748600		Retainer Spring
6	534752300		Clip
7	534751900		Jet Needle Ass'y.
8	534750500		Screw & Washer
9	534752000		Pump Cover Ass'y.
10	534749700		Diaphragm Pump
11	534747600		Pump Cover Gasket
12	534748700		Throttle Valve
13	534748500		Adjusting Screw Spring
14	534749500		Adjusting Screw
15	534747800		Main Jet Needle Ass'y.
16	534752400		O-Ring
17	534747400		Inlet Valve Spring
18	534747300		Valve Float
19	534747200		Arm Float
20	534747100		Pin Float
21	534747500		Float Pin Set Screw
22	534747900		Main Diaphragm
23	534749600		Main Diaphragm Ass'y.
24	534747700		Main Diaphragm Cover
25	534750400		Screw & Washer

GB150 Gas Blow Page 4 of 7  
CARBURETOR

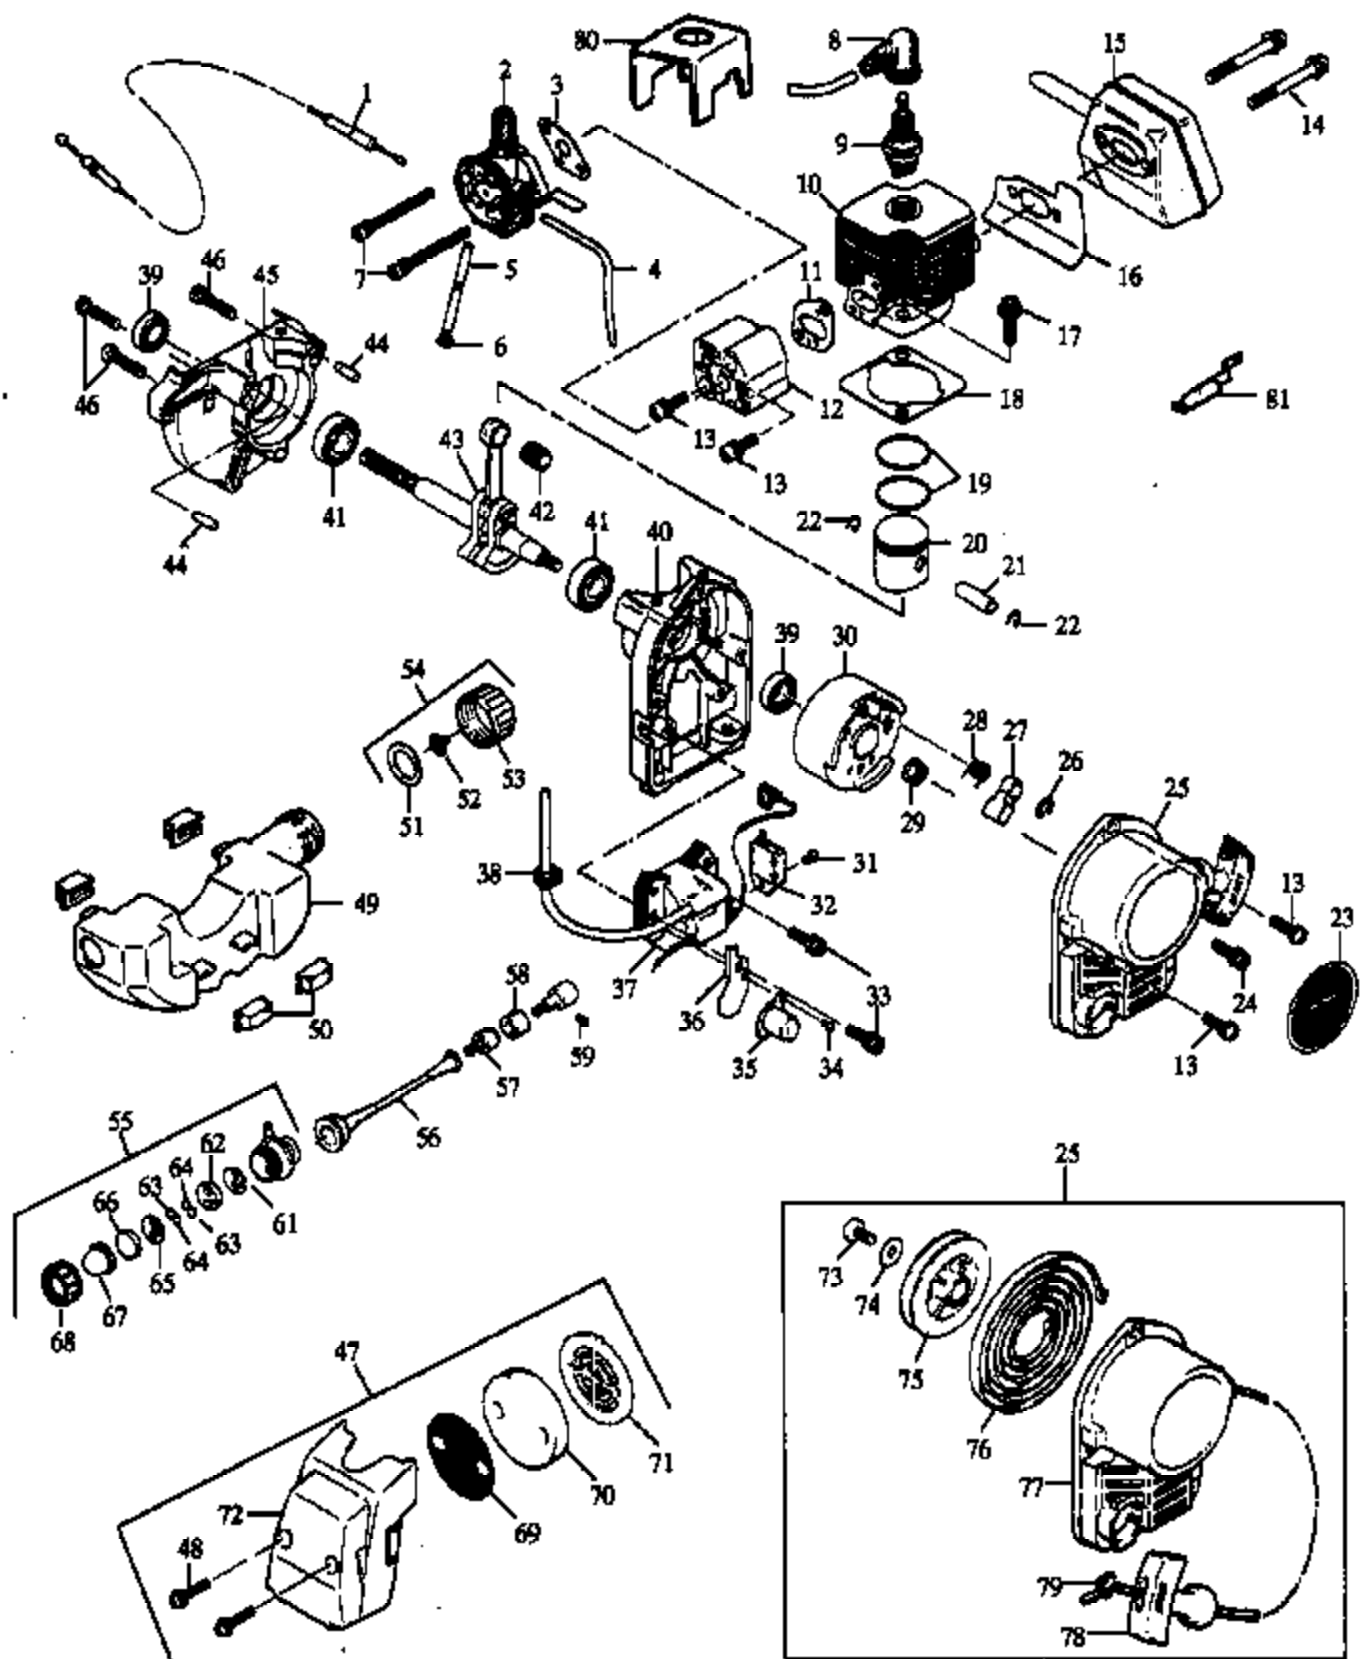

Ref #	Part Number	Qty	Description
1	534750001		Throttle Wire
2	534752100		Carburetor
3	534754100		Carburetor Gasket
4	534745900		Fuel Tube
5	534746000		Fuel Tube
6	534746500		Clip
7	534748400		Screw & Washer
8	534748300		Plug Cap
9	530030005		Spark Plug (CJ-8)
10	534751003		Cylinder
11	534754000		Insulator Gasket
12	534752500		Insulator
13	534748200		Screw & Washer
14	534745100		Bolt & Washer
15	534752600		Muffler
16	534752700		Muffler Gasket
17	534754600		Bolt
18	534753900		Cylinder Gasket
19	534752900		Top & Bottom Ring
20	534752800		Piston
21	534753000		Piston Pin
22	534746600		Piston Pin Clip
23	534754200		Name Label (Not a serviceable part)
24	534754800		Screw & Washer
25	534753300		Recoil Starter
26	534754400		Snap Ring
27	534753500		Ratchet
28	534753800		Spring Return
29	534754500		Nut
30	534751200		Rotor
31	534750100		Screw
32	534751400		Transistor Unit
33	534746400		Bolt & Washer
34	534753600		Screw
35	534751600		Stop Switch
36	534751500		Bracket
37	534751300		Ignition Coil
38	534748100		Grommet
39	534745200		Oil Seal
40	534750800		Starter Case
41	534754300		Ball Bearing
42	534748000		Needle Bearing
43	534751100		Crankshaft Ass'y.
44	534753700		Knock Pin
45	534750900		Case Drive
46	534750200		Screw
47	534750600		Air Cleaner
48	534750300		Screw & Washer
49	534726300		Fuel Tank
50	534751800		Rubber Pad
51	534728200		Gasket
52	534783400		Umbrella Valve
53	534727405		Cap
54	534728300		Gas Cap Ass'y. (Incl. #51,52,53)
55	534745300		Primer Pump
56	534751700		Suction Hose

GB150 Gas Blow Page 6 of 7  
POWER UNIT

Ref #	Part Number	Qty	Description
57	534749000		Fuel Filter (Incl. 58,59)
58	534749100		Filter
59	534749200		Sponge
61	534746300		Gasket
62	534745400		Valve Seat
63	534746100		Sponge
64	534745600		Ball
65	534745500		Gasket
66	534746200		Valve Seat
67	534745700		Cap
68	534745800		Cap Nut
69	534746800		Screen
70	534746900		GB150 Gas Blow Pipe
71	534754500	POWER UNIT	Element
72	534750700		Grid
72	534750700		Cleaner Case
73	534753200		Screw
74	534749400		Washer
75	534753100		Reel
76	534749300		Spiral Spring
77	534753400		Starter Case
78	534748900		Starter Knob
79	534746700		Starter Rope
80	534741200		Cylinder Cover
81	534776200		Spark Arrestor Ass'y.

GB150 Gas Blow Pipe Page 7 of 7  
POWER UNIT