


**⚠ WARNING**

All repairs, adjustments and maintenance not described in the Operator's Manual must be performed by qualified service personnel.

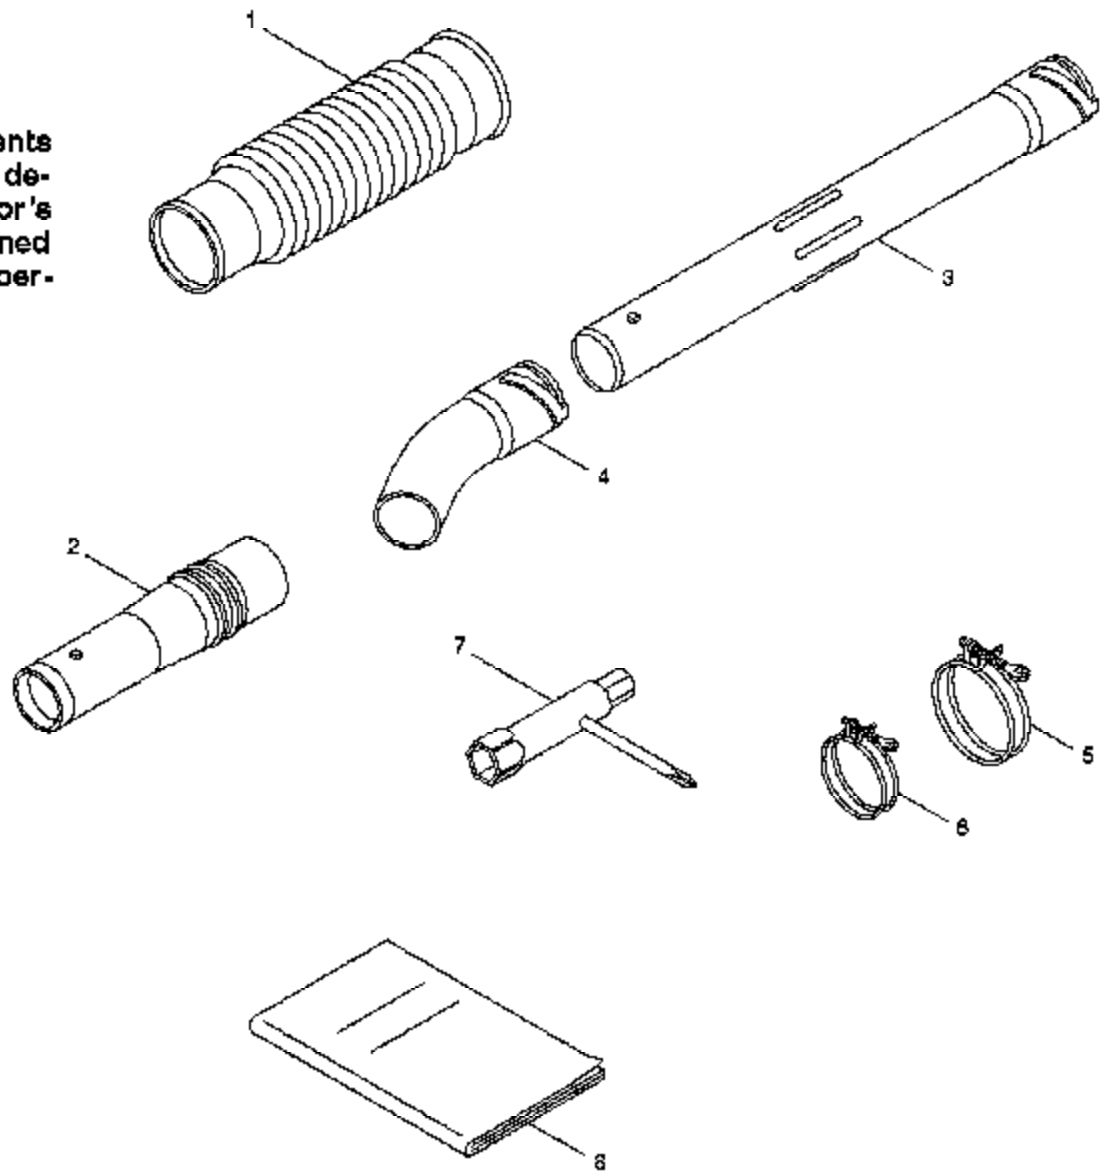

---


Ref #	Part Number	Qty	Description
1	530058481		Tube - Flex
2	530058482		Tube - Base
3	530058483		Tube - Middle
4	530058484		Nozzle
5	530058485		Clamp - Wire Lg.
6	530058486		Clamp - Wire Sm.
7	530058487		Scrench
8	530088812		Manual

---

BP400 Gas Blower Page 2 of 11  
Attachments

**⚠ WARNING**

All repairs, adjustments and maintenance not described in the Operator's Manual must be performed by qualified service personnel.

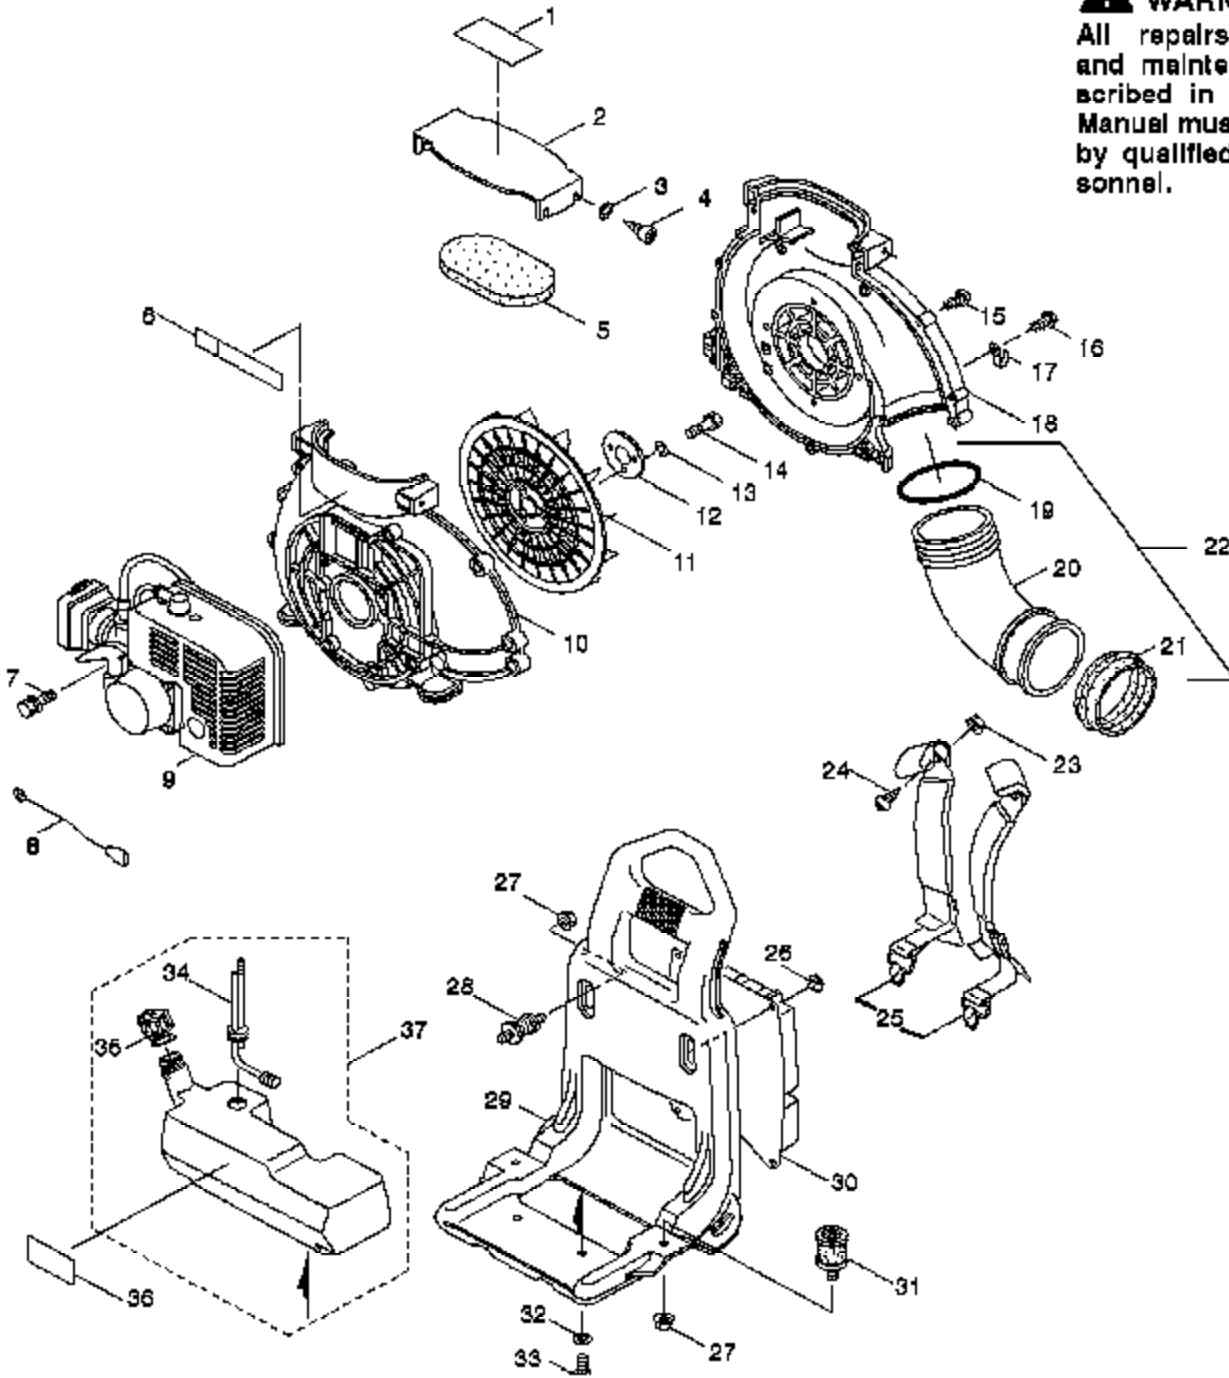


Ref #	Part Number	Qty	Description
1	530058370		Label - Model/Inst. (Not a serviceable part)
2	530058351		Cover
3	530058352		Washer - Cover screw
4	530058353		Screw - Cover
5	530058350		Packing
6	530058371		Label - Warning (Not a serviceable part)
7	530058337		Bolt
8	530058338		Ground Wire
9	530058336		Shroud
10	530058339		Fan Housing - Rear
11	530058341		Impeller
12	530058342		Plate - Impeller
13	530058343		Washer - Spring
14	530058344		Bolt
15	530058346		Screw - Fan Housing
16	530058354		Screw - Clamp
17	530058345		Clamp
18	530058340		Fan Housing-Front
19	530058347		O-Ring (large)
20	530058348		Tube - Blower Outlet
21	530058349		Joint - Rubber
22	530071388		Kit-Tube & O-Ring (Incl. 19,20,21)
23	530058358		Nut
24	530058357		Bolt
25	530058356		Assy. - Shoulder Strap
26	530058363		Fastener - Pad
27	530058360		Nut
28	530058359		Isolator - Top
29	530058355		Frame
30	530058362		Pad - Cushion
31	530058361		Isolator - Bottom
32	530058368		Washer
33	530058369		Screw
34	530058367		Fuel Filter Assy.
35	530058366		Fuel Cap Assy.
36	530058372		Label-Fuel (Caution) (Not a serviceable part)
37	530058364		Fuel Tank Assy. (Incl. 32,33,34 & 39)

BP400 Gas Blower Page 4 of 11  
Blower Assembly

**⚠ WARNING**


All repairs, adjustments and maintenance not described in the Operator's Manual must be performed by qualified service personnel.

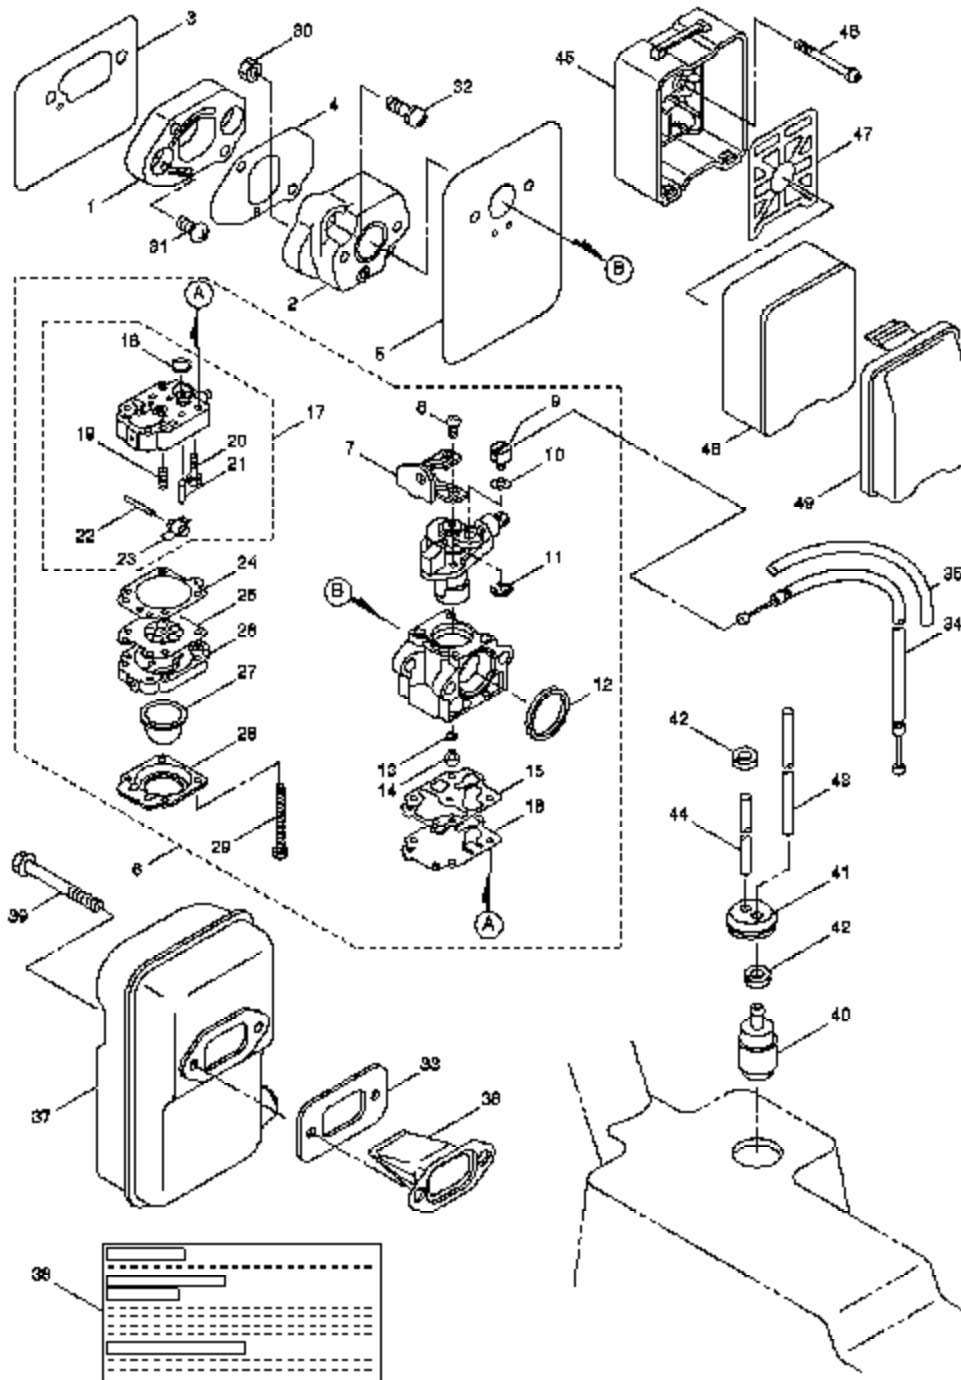

Ref #	Part Number	Qty	Description
1	530058431		Adapter
2	530058432		Insulator
3	530058433		Gasket
4	530058434		Gasket
5	530058435		Gasket
6	530058436		Carburetor walbro (wyk106-108)
7	530058437		Bracket
8	530058438		Screw
9	530058439		Arm
10	530058440		Washer
11	530058441		Snap Ring
12	530058442		Packing
13	920552147	BP400 Gas Blower	O-Ring
14	530058444	Carburetor Assembly	Main Jet
15	530058445		Gasket
16	530058446		Diaphragm
17	530058447		Body Assy.
18	140432051		Filter
19	530058449		Spring
20	530058450		Screw
21	160302078		Float Valve
22	920432094		Pin
23	530058453		Lever
24	530058454		Gasket
25	530058455		Diaphragm
26	530058456		Body
27	530058457		Priming Pump
28	530058458		Primer Pump Cover
29	530058459		Screw
30	920152097		Nut
31	530058461		Screw
32	233b0520		Screw
33	110092873		Muffler Gasket
34	530058464		Throttle Cable
35	530058465		Vinyl Pipe
36	180772093		Spark Arrester
37	490702577		Muffler Comp.
38	530058468		Label-fuel mix inst.
39	921502180		Bolt
40	530058470		Fuel Filter
41	530058471		Fuel Tank Grommet
42	530058472		Clamp-Fuel Filter
43	530058473		Tube
44	530058474		Tube
45	530058475		Air filter case Assy.
46	530058476		Screw
47	530058477		Air Filter Plate
48	530058478		Air Filter Element
49	530058479		Air Filter Cap

**⚠ WARNING**

All repairs, adjustments and maintenance not described in the Operator's Manual must be performed by qualified service personnel.

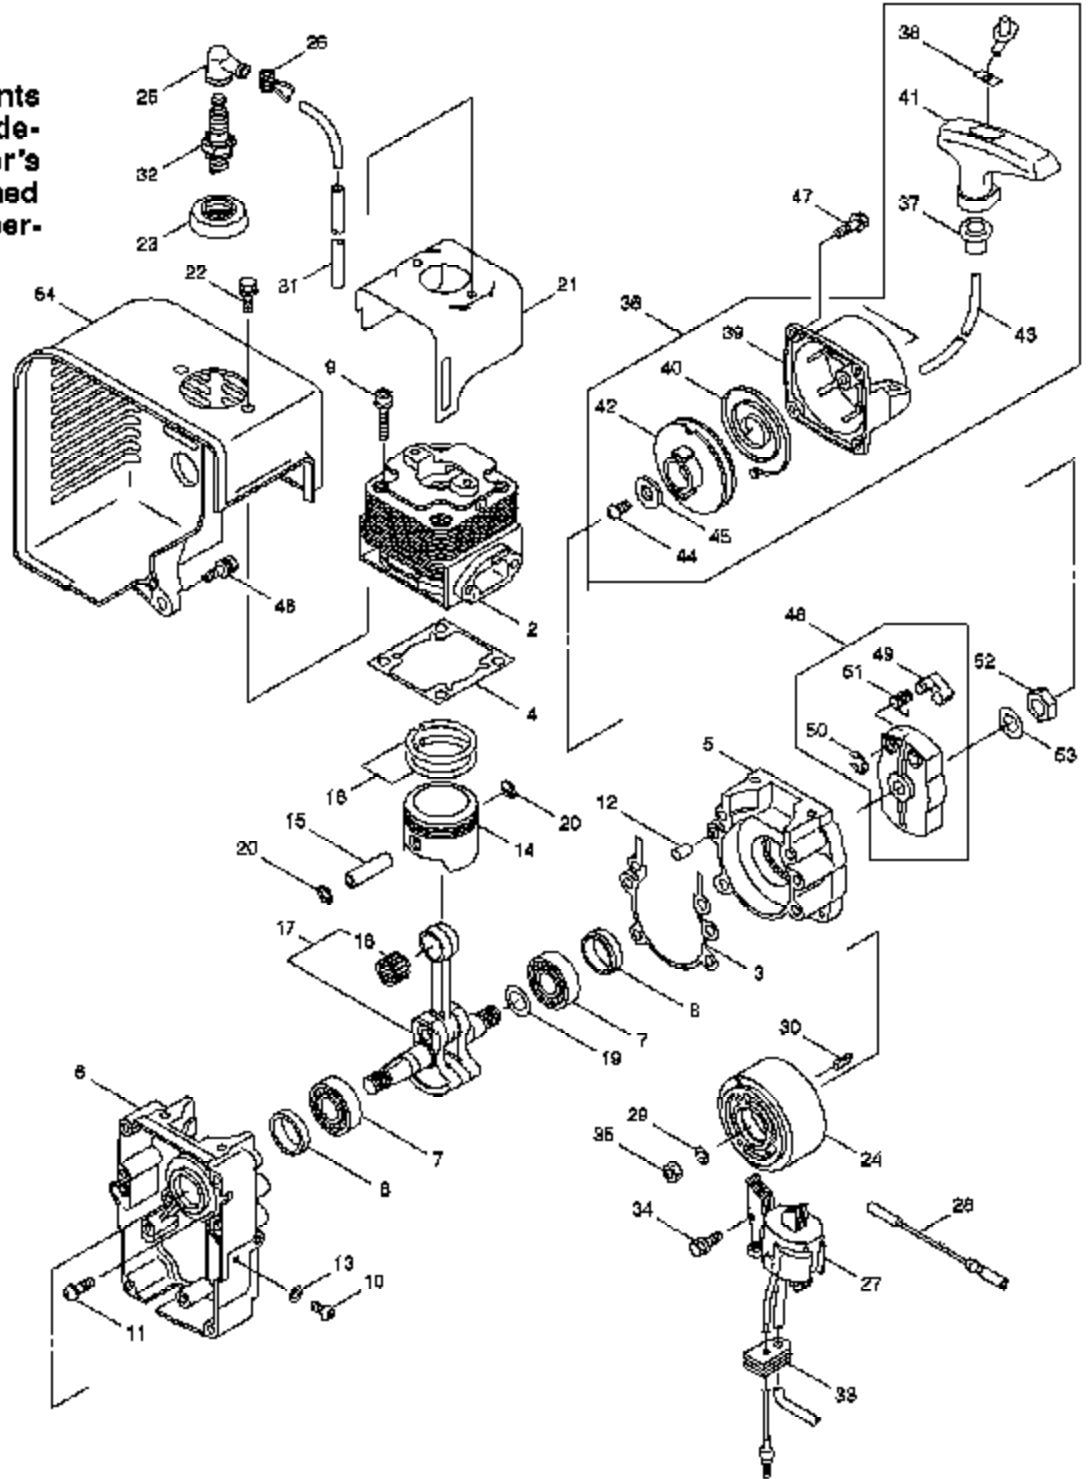

Ref #	Part Number	Qty	Description
2	110052133		Cylinder
3	110092521		Gasket
4	110602350		Gasket
5	140022239		Crankcase
6	140022240		Crankcase
7	920452005		Bearing
8	920492076		Oil Seal
9	530058381		Bolt
10	214b0608		Screw
11	223b0630		Screw
12	551a0610		Dowel Pin
13	751q0600		Gasket
14	130012121	BP400 Gas Blower	Piston
15	130022065	Engine Assembly	Piston Pin
16	530094023		Piston Ring Set
17	530058389		Crankshaft Assy. (Incl. #18)
18	530094027		Needle Bearing
19			Shim
	920252134		Shim 0.10mm
	920252135		Shim 0.20mm
	530094030		Shim 0.40mm
	530058394		Shim 0.60mm
20	920332058		Snap Ring
21	490892298		Shroud-Heat Shield
22	530058397		Bolt
23	490062051		Boot
24	530058399		Flywheel
25	530094085		Spark Plug Cap
26	530094086		Terminal
27	530089445		Ignition Coil Assy.
28	260112321		Leadwire
29	920222147		Washer
30	920382078		Key
31	920592233		Tube
32	530058407		Spark Plug
33	920712077		Grommet
34	530094080		Bolt
35	314r1000		Nut
36	490882380		Assy-Recoil Starter
37	130702064		Rope Guide
38	131692386		Plate
39	320992210		Recoil Starter Case
40	530058415		Recoil Spring
41	530058416		Grip
42	591012085		Pulley
43	591062117		Rope
44	920092218		Screw
45	922002019		Washer
46	920092285		Screw
47	530058422		Screw
48	490802155		Starter Pulley
49	131652070		Pawl
50	920332010		Snap Ring
51	921442046		Return Spring
52	315b0800		Nut
53	410b0800		Washer

---



Ref #	Part Number	Qty	Description
54	490892370		Shroud

---

BP400 Gas Blower Page 9 of 11  
Engine Assembly

**⚠ WARNING**

All repairs, adjustments and maintenance not described in the Operator's Manual must be performed by qualified service personnel.

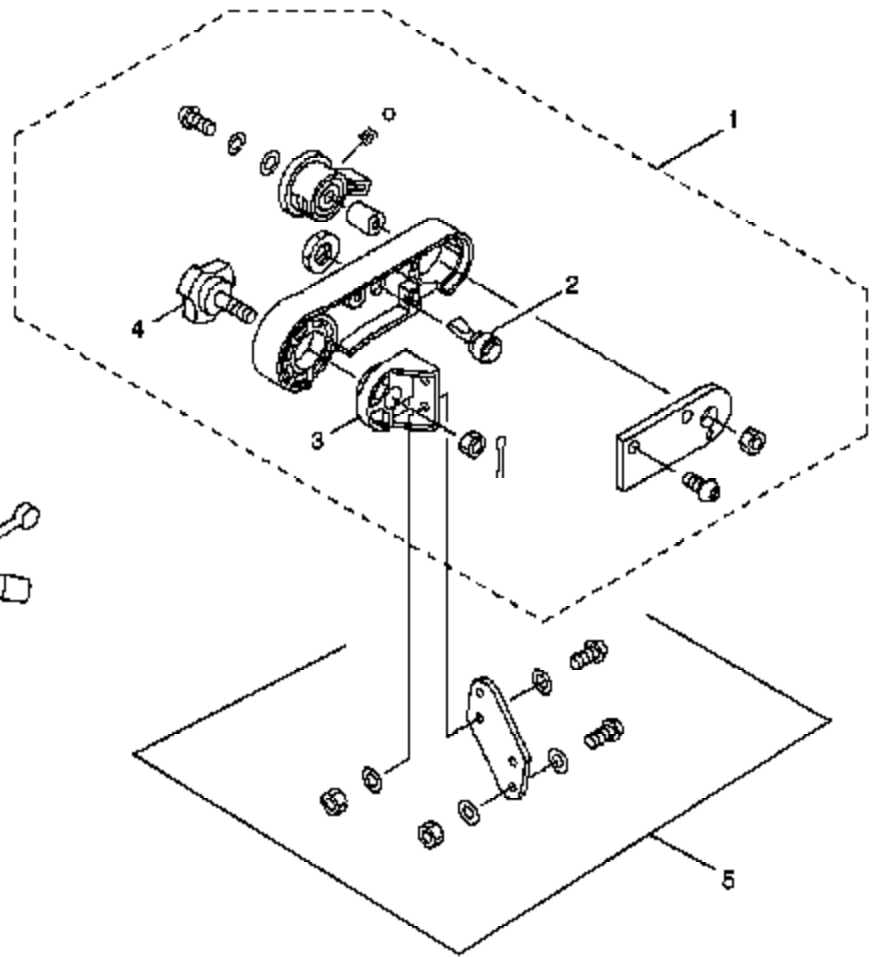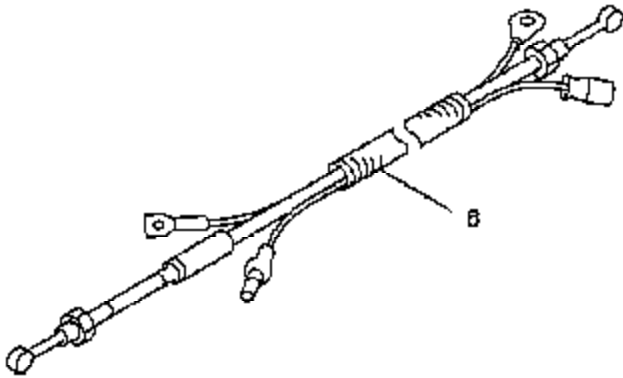

---

Ref #	Part Number	Qty	Description
1	530058490		Throttle lever Assy.
2	530058506		Switch
3	530058502		Flange
4	530058503		Knob Bolt
5	530071389		Kit - Plate
6	530058511		Assy. - Throttle Cable

---

BP400 Gas Blower Page 11 of 11  
Throttle Lever Assembly