



⚠ WARNING
 All repairs, adjustments and maintenance not described in the Operator's Manual must be performed by qualified service personnel.

Ref #	Part Number	Qty	Description
1	530340179		Screw
2			Trigger Lock
	530037040		Trigger Lock Type 1 & Type 2
	530402931		Trigger Lock Type 3
3	530401457		Wrist Support Cushion
4	530401436		Battery Door
5	530401581		Circuit Board Ass'y.
6	530401485		Probe-Clamp
7	530401807		Wire Ass'y. (Red)
8	534101430		Assist Handle Cushion
9	530401481		Hanging Bracket
10			Trigger Switch
	530400412		Trigger Switch Type 1 & Type 2
	530402856		Trigger Switch Type 3
11			Battery Hsg. Set
	530402267		Battery Hsg. Set Type 1 & Type 2
	530402837		Battery Hsg. Set Type 3
12	530401479		Receptacle Ass'y.
13	530401456		Tube w/ Warning Decal
14	530401443		Motor Hsg Set w/ Line Limiter
15	530401582		Motor/Hub Ass'y.
16	530015775		Screw
17	530401460		Clamp-Motor
18	530401452		Battery Spring
19	530401480		Charger
20	530402815		Battery Kit
21	530401464		Spring
22	530401466		Clip Retainer
23	530401467		Screw w/Washer
24	952711527		Spool w/Line
25	530015994		Screw
	530084351		Operator Manual Not shown
	530401716		Wall Anchor Not shown
	530401487		Screw Not shown
			Warning Decal Not shown
	530402292		Warning Decal Type 1 & Type 2. Not shown
	530402932		Warning Decal Type 3. Not shown

HANDYSTIK Cordless Trimmer
TRIMMER ASSEMBLY