


⚠ WARNING

All repairs, adjustments and maintenance not described in the Operator's Manual must be performed by qualified service personnel.

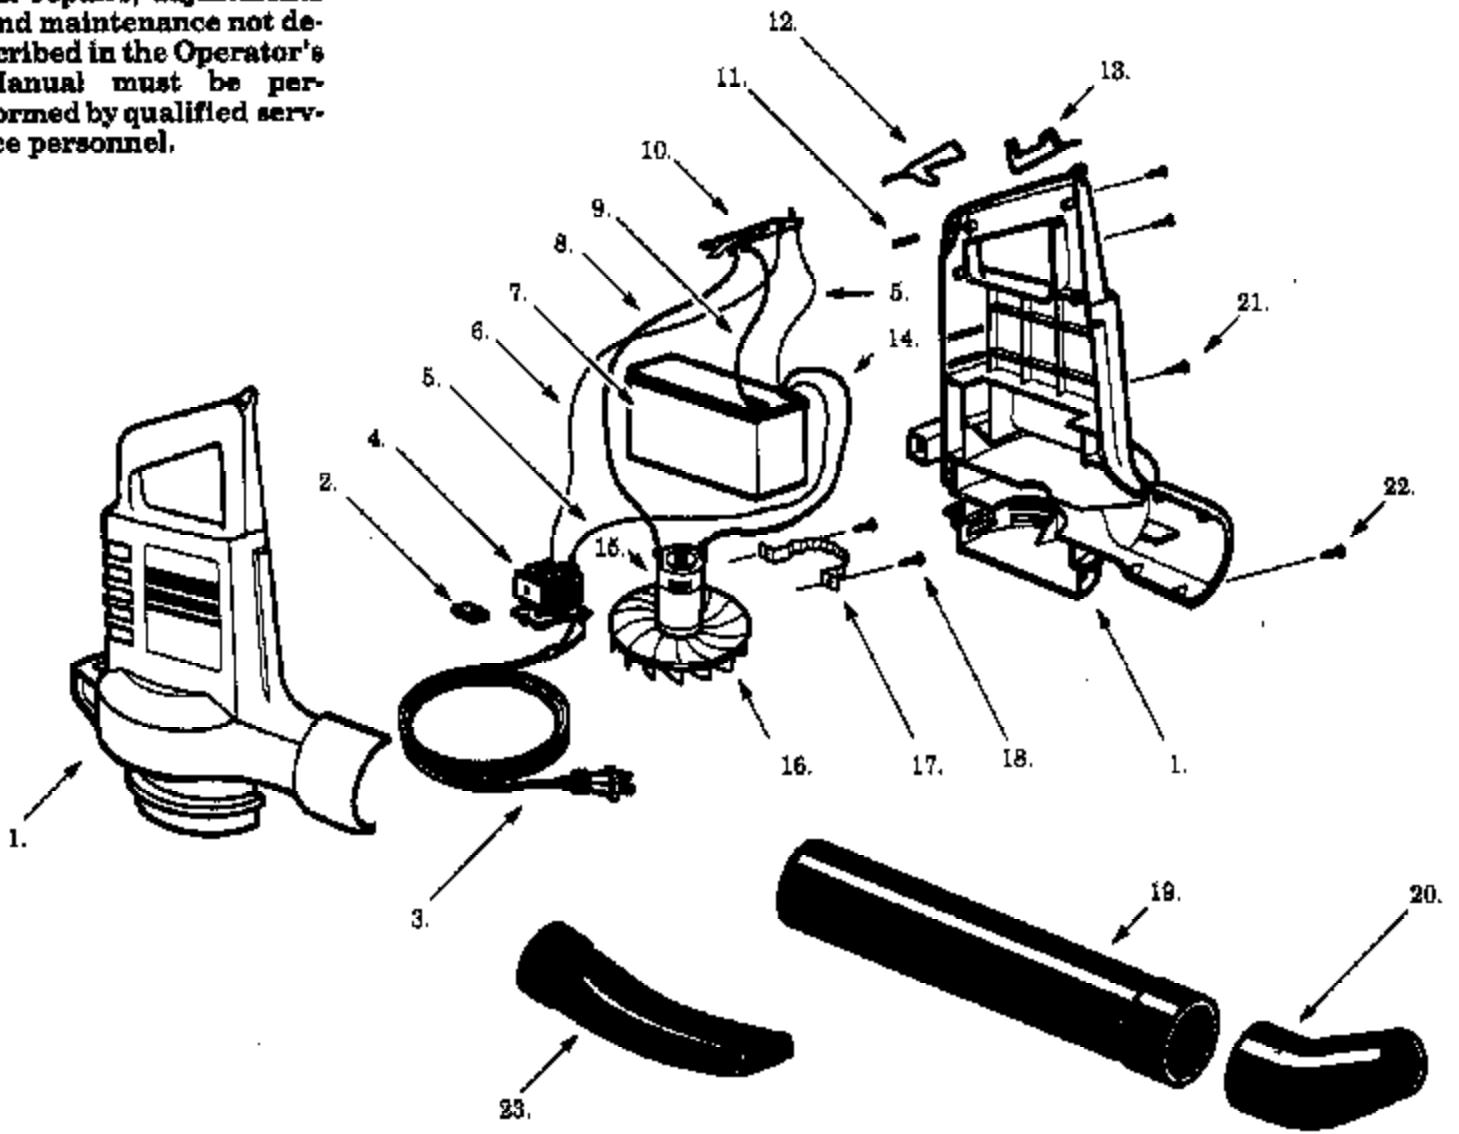

Ref #	Part Number	Qty	Description
1	530400541		Blower Housing Set
2	530350017		Spacer
3	530400546		Cord Set
4	530400536		Charger
5	530400548		Leadwire Assy) Black (22 Ga. wire)
6	530400550		Leadwire (22 ga) Red
7	530400535		Battery
8	530400544		Leadwire (14") Red (14 Ga wire)
9	530400552		Leadwire (7") White (14 Ga. wire)
10	530036586		Circuit Board
11	530015102		Roll Pin
12	530037040		Trigger Lock
13	530400412		Trigger
14	530400542		Leadwire (12") Black (14 Ga. wire)
15	530014502		Motor Assembly
16	530036389		Impeller
17	530400540		Motor Clamp
18	530015533		Screw (2 required)
19	534352705		Outlet Tube
20	534373405		Nozzle
21	530340179		Screw
22	530015994		Screw
23	530036769		Flare Nozzle
	530068709		Operator's Manual Not Shown.
	530061475		Carton (Not a serviceable part) Not Shown.
	530036185		Instruction Decal (Not a serviceable part) Not Shown.

RB90 Cordless Blower Page 2 of 2

BLOWER ASSEMBLY