



⚠ WARNING

All electrical repairs to this trimmer, including housing, switching, motor, etc., must be diagnosed and repaired by qualified service personnel. Failure to do so could cause the double insulation construction to become ineffective and result in serious personal injury.

Ref #	Part Number	Qty	Description
1	530347598		Trigger Handle
2	530351300		Screw
3	530347653		Cord Retainer
4	530347897		On-Off Switch
5	530347654		Trigger Switch
6	530347877		Wiring Harness
7	530400070		Shield
11	530340887		Motor Housing Set
12	530340556		Motor Assembly
13	530340150		Washer
14	530344329		Hub
15	530340594		Line Saver
16	530340732	409.9 Electric Trimmer Adaptor	2 of 2
17	530340590	TRIMMER ASSEMBLY	
18	530340591		Drive Gear
18	530340591		Cover
19	530340006		Spring
20	952701521		Spool w/Line
21	530340592		Tap Button
22	530344506		upper Tube
23	530340228		Bolt
24	530322295		Assist Handle
25	530015659		Wing nut
26	530346034		Screw
27	530344507		lower Tube
28	530015653		Locknut
29	530340731		Insert
30	530343307		Connector
	530347236		Motor Hsg. Decal
	530400072		Operator's Manual
	530400076		Carton (Not a serviceable part)
	530400077		Carton Contents Bag