

050000

Illustrated Parts List

Model Series

050000

TYPE NUMBERS
0005, 0111, 0113, 0114.



TABLE OF CONTENTS

Air Cleaner	8
Blower Housing	11
Cams	5
Carburetor	9
Controls	10
Control Panel	11
Crankcase Cover	4
Crankshaft	5
Cylinder	2
Flywheel	7
Fuel System	12
Governor Spring	10
Cylinder Head	3
Ignition	7
Kits/Gaskets-Engine	16
Kits/Gaskets-Valve	16
Muffler	14
Oil Sensor Group	15
Piston and Rod Group	6
Rewind Starter	13
Valves	3

PRINTED IN U.S.A.





COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

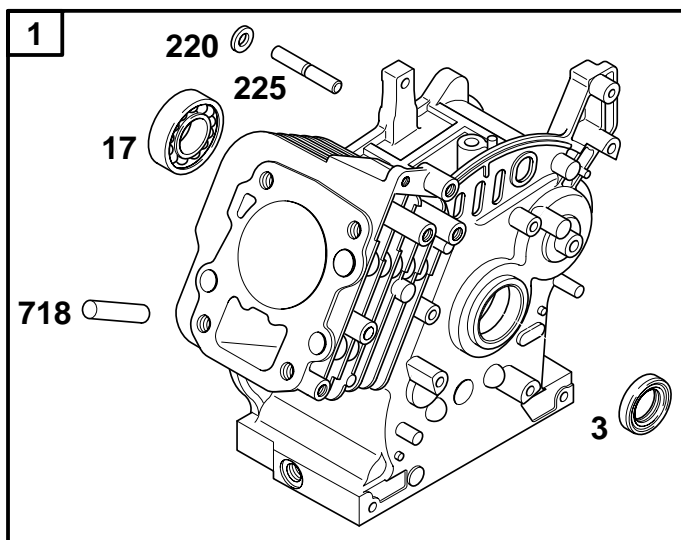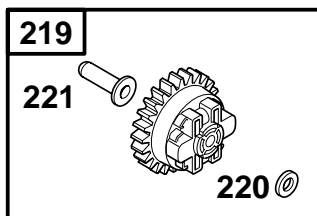

1019 LABEL KIT



1058 OWNER'S MANUAL

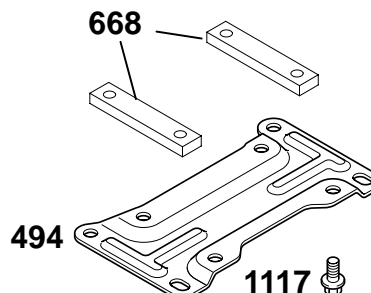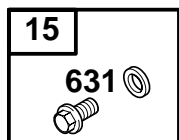

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	715918	Cylinder Assembly Used on Type No(s). 0005, 0113, 0114. Note 715921 Cylinder Assembly Used on Type No(s). 0111.	220	710035	Washer (Governor Gear)	718	710005	Pin—Locating
			221	710027	Cup—Governor	729	711518	Clip—Wire
			225	710028	Shaft—Governor Gear	1019	715953	Kit—Label
			494	711486	Mount—Engine Used on Type No(s). 0005, 0111.	1058	MS6669	Owner's Manual
			631	★711059	Washer (Oil Drain Plug)	1117	711487	Screw (Engine Mount) Used on Type No(s). 0113, 0114. Note
			668	711517	Spacer (Engine Mount) Used on Type No(s). 0005, 0111.			711519 Screw (Engine Mount) Used on Type No(s). 0005, 0111.
3	★711520	Seal—Oil (Magneto Side)						
15	715811	Plug—Oil Drain						
17	710482	Bearing—Ball						
219	715679	Gear—Governor						

★ Included in Engine Gasket Set—Ref. No. 358.


△ Included in Valve Gasket Set—Ref. No. 1095.

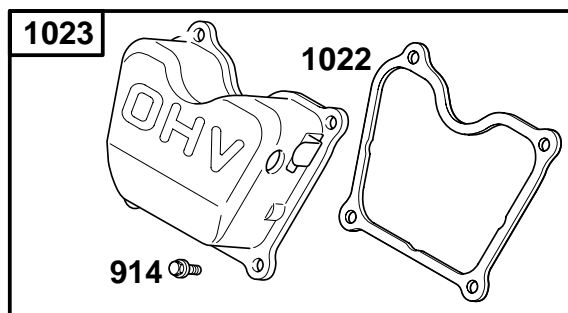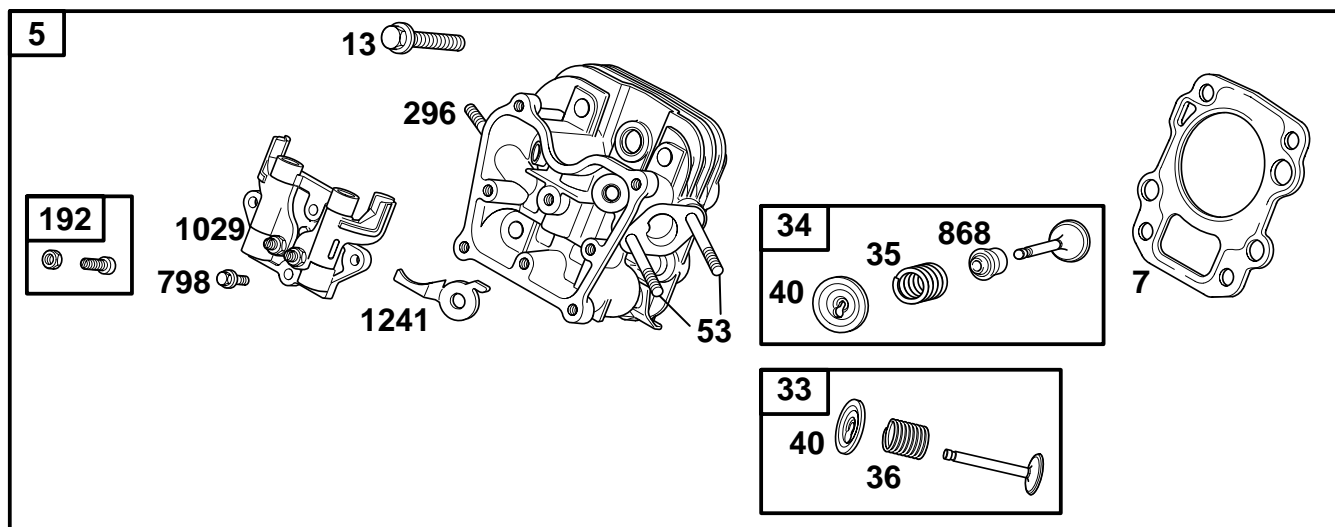

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
5	715927	Head-Cylinder	40	711491	Retainer-Valve	868	Δ711287	Seal-Valve
7	Δ*711489	Gasket-Cylinder Head	45	711173	Tappet-Valve	914	710057	Screw
13	710020	Screw (Cylinder Head)	53	710148	Stud (Carburetor)			(Rocker Cover)
33	715931	Valve-Exhaust	192	715841	Adjuster-Rocker Arm	1022	Δ*711490	Gasket-Rocker Cover
34	715932	Valve-Intake	296	710099	Stud (Muffler)	1023	715930	Cover-Rocker Arm
35	711492	Spring-Valve (Intake)	798	710234	Screw (Rocker Arm)	1026	711493	Rod-Push
36	711492	Spring-Valve (Exhaust)				1029	715929	Arm-Rocker
						1241	711488	Plate-Valve Spring

★ Included in Engine Gasket Set-Ref. No. 358.




Δ Included in Valve Gasket Set-Ref. No. 1095.

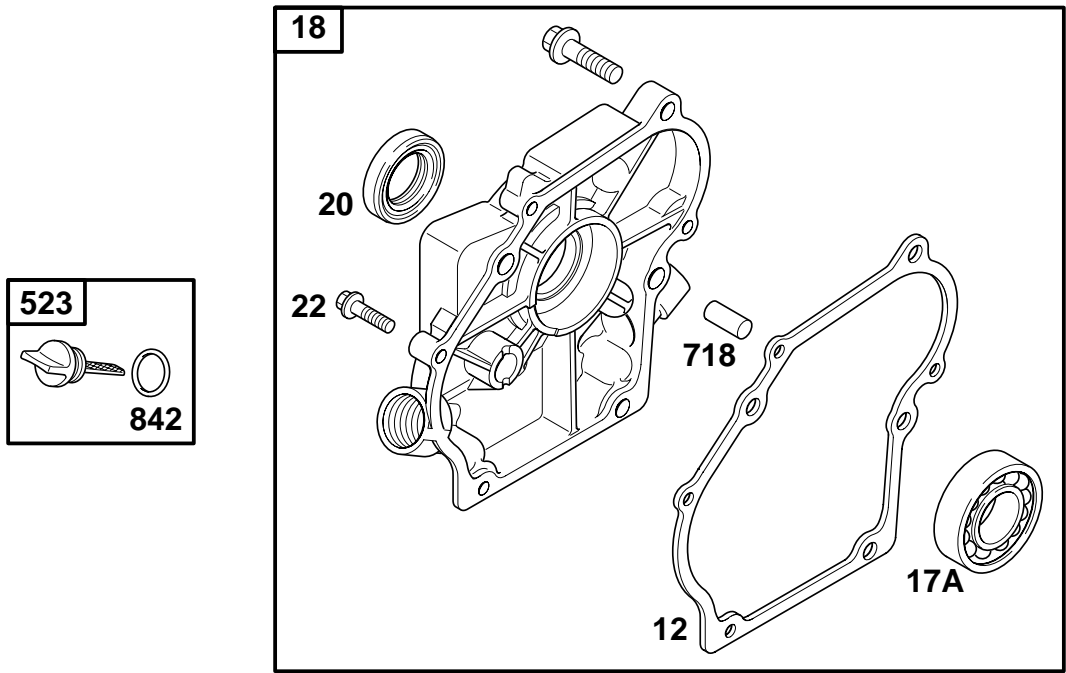

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
12	★711324	Gasket-Crankcase			<p align="center">————— Note —————</p> <p>715920 Cover-Crankcase Used on Type No(s). 0113, 0114.</p>	22	711523	Screw (Crankcase Cover/Sump)
17A	711522	Bearing-Ball				523	715588	Dipstick
18	715919	Cover-Crankcase Used on Type No(s). 0005, 0111.				718	710005	Pin-Locating
			20	★711520	Seal-Oil (PTO Side)	842	★711521	Seal-O-Ring (Dipstick Tube)

★ Included in Engine Gasket Set-Ref. No. 358.


Δ Included in Valve Gasket Set-Ref. No. 1095.

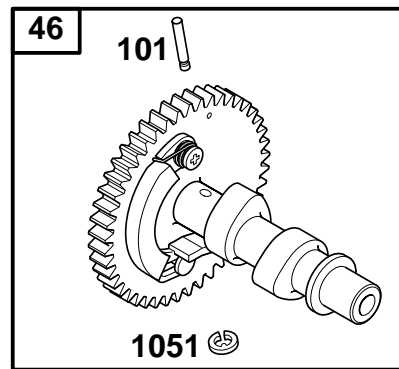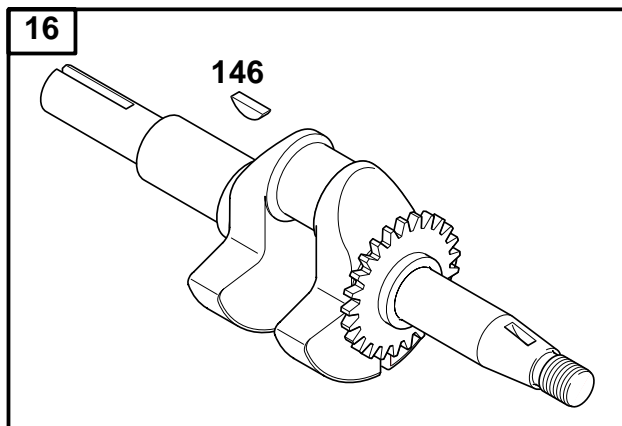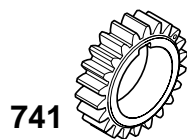

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
16	715923	Crankshaft (SAE Keyway) Used on Type No(s). 0005, 0111.			————— Note ————— 715925 Crankshaft (JIS Taper) Used on Type No(s). 0113, 0114.	46	715926	Camshaft
			24	710037	Key-Flywheel	101	711135	Pin-Shaft
						146	710037	Key-Timing
						741	711136	Gear-Timing (Spur Gear)
						1051	710548	Ring-Retaining

★ Included in Engine Gasket Set-Ref. No. 358.


△ Included in Valve Gasket Set-Ref. No. 1095.

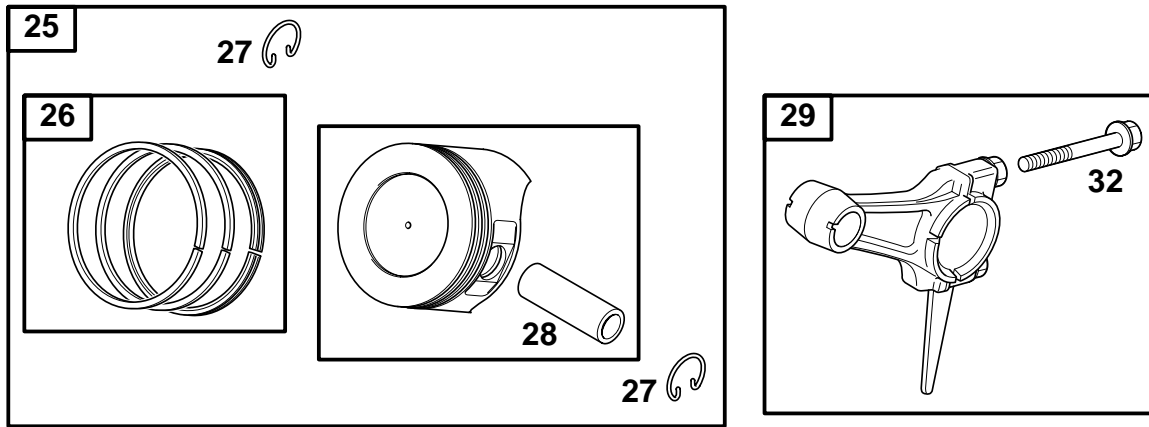

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
25	715935	Piston Assembly (Standard) Note 715936 Piston Assembly (.020" Oversize)	26	715938	Ring Set (Standard) Note 715939 Ring Set (.020" Oversize)	29	715933	Rod-Connecting (Standard) Note 715934 Rod-Connecting (.020" Undersize)
			27	711494	Lock-Piston Pin	32	710041	Screw (Connecting Rod)
			28	715937	Pin-Piston (Standard)			

★ Included in Engine Gasket Set-Ref. No. 358.


△ Included in Valve Gasket Set-Ref. No. 1095.

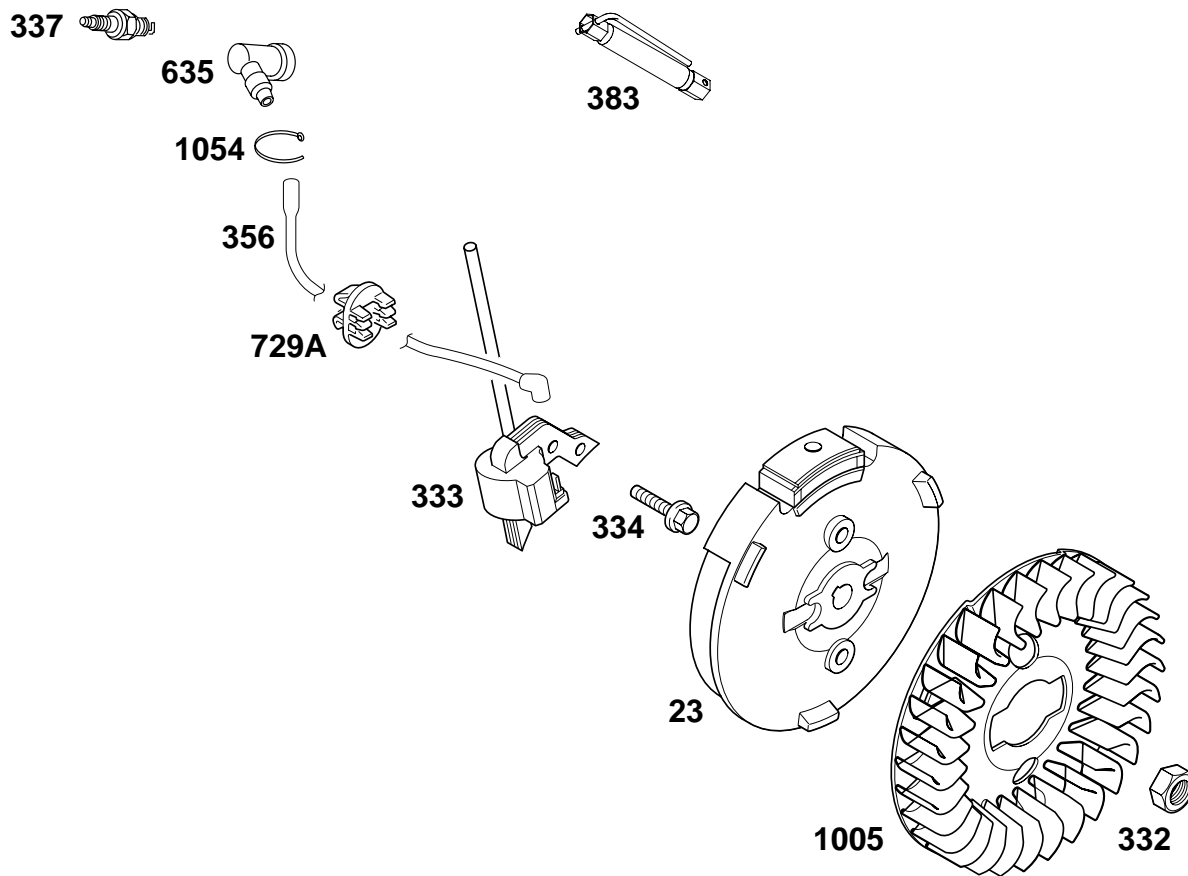

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
23	711525	Flywheel	337	711252	Plug-Spark	1005	711527	Fan-Flywheel
332	711528	Nut (Flywheel)	356	710324	Wire-Stop	1054	711529	Tie-Cable
333	711526	Armature-Magneto	383	19374	Wrench-Spark Plug			
334	711142	Screw (Magneto Armature)	635	710634	Boot-Spark Plug			
			729A	710046	Clip-Wire			

★ Included in Engine Gasket Set-Ref. No. 358.


△ Included in Valve Gasket Set-Ref. No. 1095.

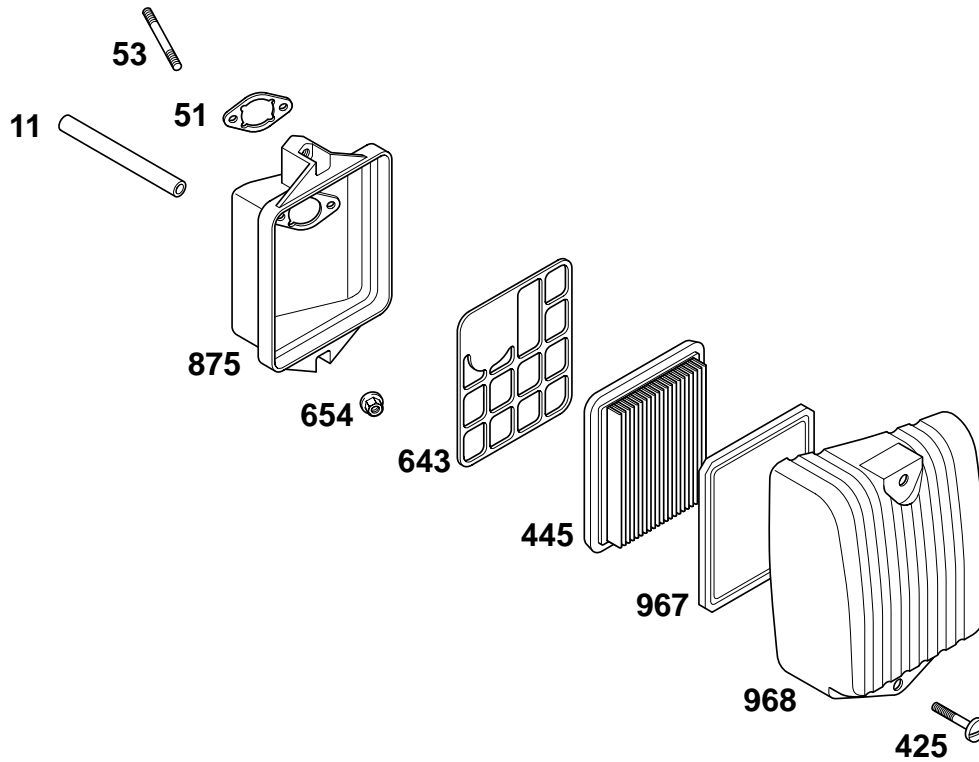

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
11	710115	Tube-Breather (Cut to Required Length)	425	711163	Screw (Air Cleaner Cover)	875	711138	Base-Air Cleaner (Plastic) (Carburetor)
51	★Δ711499	Gasket-Intake	445	711459	Filter-Air Cleaner Cartridge	967	711460	Filter-Pre Cleaner
53	710148	Stud (Carburetor)	643	711461	Retainer-Air Filter	968	711495	Cover-Air Cleaner
			654	710068	Nut			

★ Included in Engine Gasket Set-Ref. No. 358.


Δ Included in Valve Gasket Set-Ref. No. 1095.

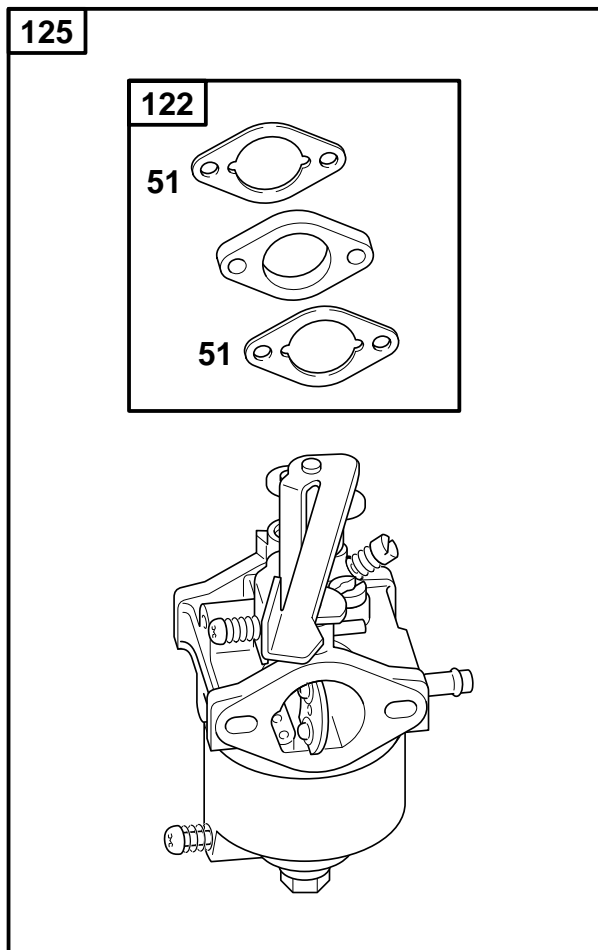

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
51	★Δ711499	Gasket-Intake	122	715940	Spacer-Carburetor	125	715978	Carburetor

★ Included in Engine Gasket Set-Ref. No. 358.


Δ Included in Valve Gasket Set-Ref. No. 1095.

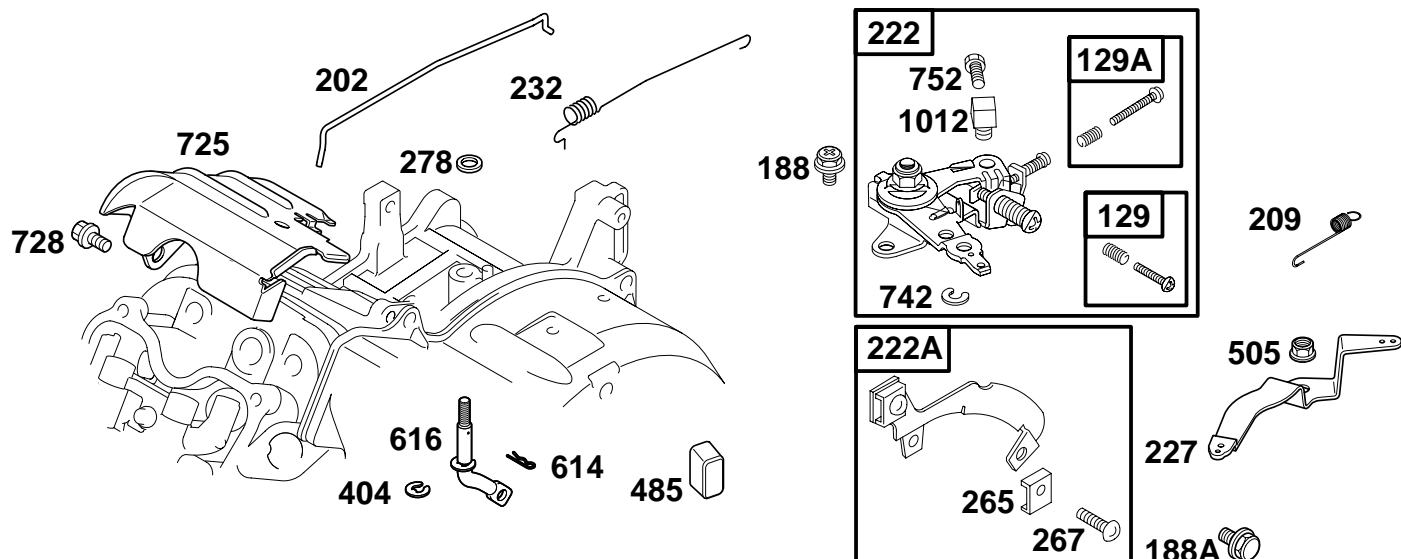

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
129	715854	Screw/Spring—Governor Speed Used on Type No(s). 0005, 0111. Note 715941 Screw/Spring—Governor Speed Used on Type No(s). 0113, 0114.	209	711508	Spring—Governor Used on Type No(s). 0005. Note 711509 Spring—Governor Used on Type No(s). 0111. 711510 Spring—Governor Used on Type No(s). 0113. 711511 Spring—Governor Used on Type No(s). 0114.	222A	715946	Bracket—Control (Remote Throttle) Used on Type No(s). 0005, 0111.
129A	715942	Screw/Spring—Governor Speed Used on Type No(s). 0111.	222	715943	Bracket—Control Used on Type No(s). 0005. Note 715945 Bracket—Control Used on Type No(s). 0113, 0114. 715944 Bracket—Control Used on Type No(s). 0111.	227	711515	Lever—Governor Control
188	710074	Screw (Control Bracket)				232	711512	Spring—Governor Link
188A	710976	Screw (Control Bracket)				265	711506	Clamp—Casing
202	711513	Link—Mechanical Governor				267	711507	Screw (Casing Clamp)
						278	711516	Washer (Governor Control Lever)
						404	710154	Washer (Governor Crank)
						485	692295	Knob—Control
						505	711208	Nut (Governor Control Lever)
						614	710056	Pin—Cotter
						616	711514	Crank—Governor
						725	711503	Shield—Heat
						728	710023	Screw (Heat Shield)
						742	710477	Retainer—E Ring
						752	710748	Screw (Link Retainer)
						1012	710855	Retainer—Link

★ Included in Engine Gasket Set—Ref. No. 358.

△ Included in Valve Gasket Set—Ref. No. 1095.

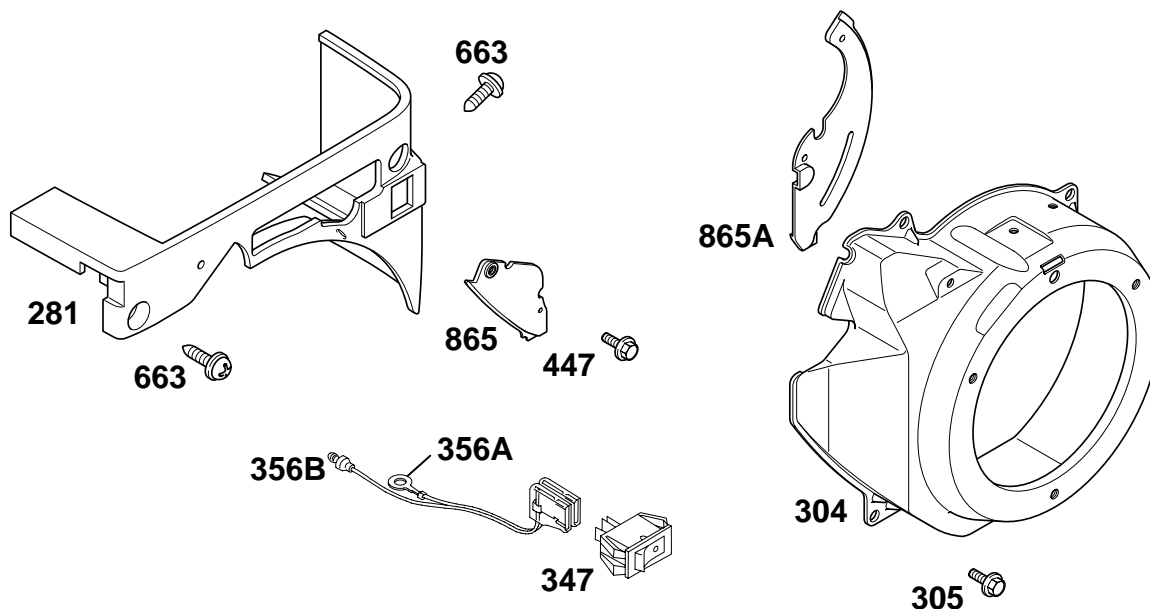


1036 EMISSIONS LABEL

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
281	711543	Panel—Control Used on Type No(s). 0005. —— Note —— 711544 Panel—Control Used on Type No(s). 0111.	305	710023	Screw (Blower Housing)	663	711249	Screw (Control Panel)
304	711533	Housing—Blower Used on Type No(s). 0005, 0111. —— Note —— 711534 Housing— Blower Used on Type No(s). 0113, 0114.	347	691995	Switch—Rocker Used on Type No(s). 0111.	865	711536	Cover—Air Guide
			356A	710087	Wire—Stop Used on Type No(s). 0111.	865A	711535	Cover—Air Guide
			356B	710120	Wire—Stop Used on Type No(s). 0111.	1036	711545	Label—Emissions
			447	710023	Screw (Air Guide Cover)			

★ Included in Engine Gasket Set—Ref. No. 358.


△ Included in Valve Gasket Set—Ref. No. 1095.

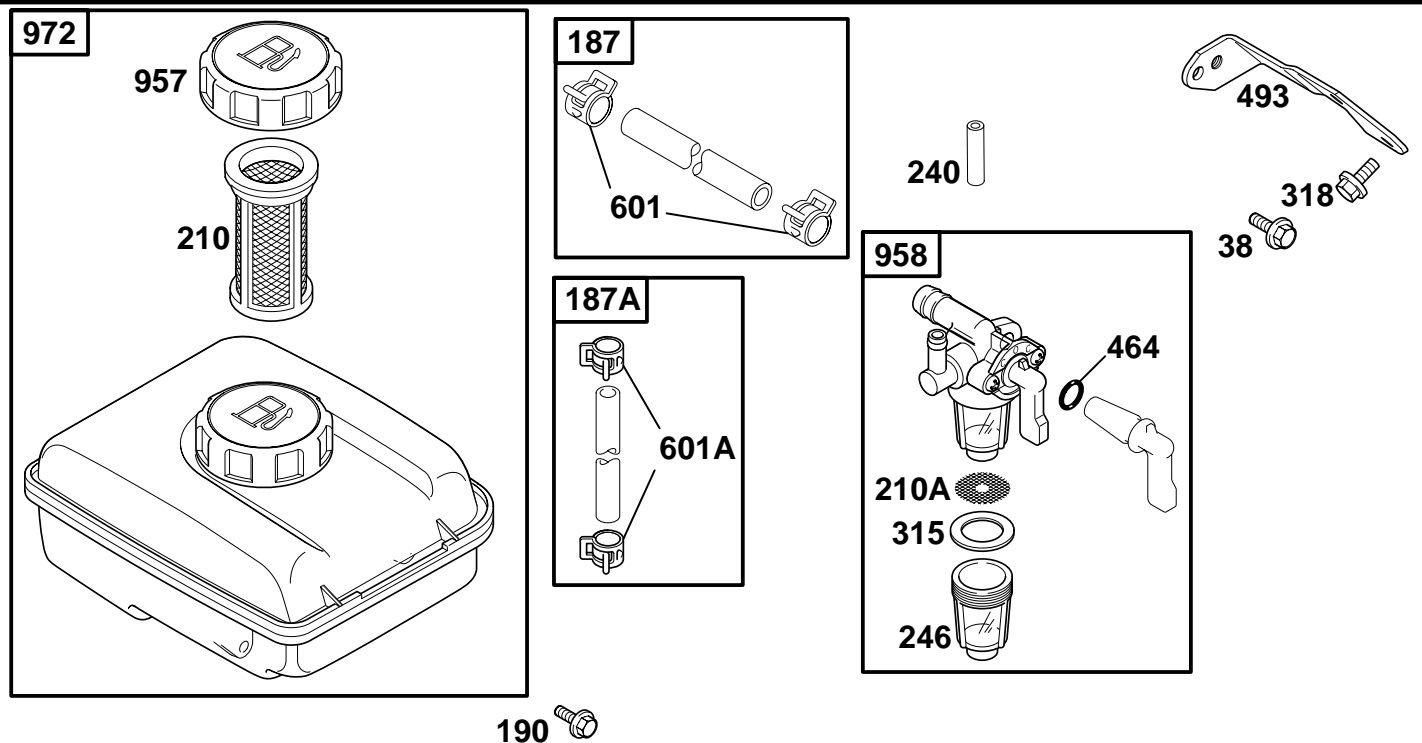

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
38	710057	Screw (Fuel Shut-Off Valve) Used on Type No(s). 0005, 0111. Note 711548 Screw (Fuel Shut Off Valve) Used on Type No(s). 0113, 0114.	187A	715126	Line-Fuel (4mm Inside Diameter, Fuel Shut Off Valve To Carburetor) (Cut to Required Length)	601	710067	Clamp-Hose Used on Type No(s). 0005, 0111. Note 711549 Clamp-Hose Used on Type No(s). 0113, 0114.
187	715125	Line-Fuel (8mm Inside Diameter, Fuel Tank To Fuel Shut Off Valve) (Cut to Required Length) Used on Type No(s). 0005, 0111. Note 715954 Line-Fuel (8mm Inside Diameter, Fuel Tank To Fuel Shut Off Valve) Used on Type No(s). 0113, 0114.	190	711142	Screw (Fuel Tank)	601A	710075	Clamp-Hose
			210	710065	Strainer-Fuel	957	711537	Cap-Fuel Tank (Plastic)
			210A	710071	Strainer-Fuel	958	715901	Valve-Fuel Shut Off (Plastic) Used on Type No(s). 0005, 0111. Note 711547 Valve-Fuel Shut Off (Plastic) Used on Type No(s). 0113, 0114.
			240	711550	Filter-Fuel Used on Type No(s). 0113, 0114.	972	715951	Tank-Fuel (Plastic) Used on Type No(s). 0005, 0111.
			246	710070	Bowl-Fuel Filter			
			315	★710072	Seal-O-Ring (Filter Bowl)			
			318	710074	Screw (Mounting Bracket)			
			464	★710069	Seal-O-Ring (Fuel Shut Off Valve)			
			493	711538	Bracket-Mounting Used on Type No(s). (0005, 0111). Note 711546 Bracket-Mounting Used on Type No(s). (0113, 0114).			

★ Included in Engine Gasket Set-Ref. No. 358.



△ Included in Valve Gasket Set-Ref. No. 1095.

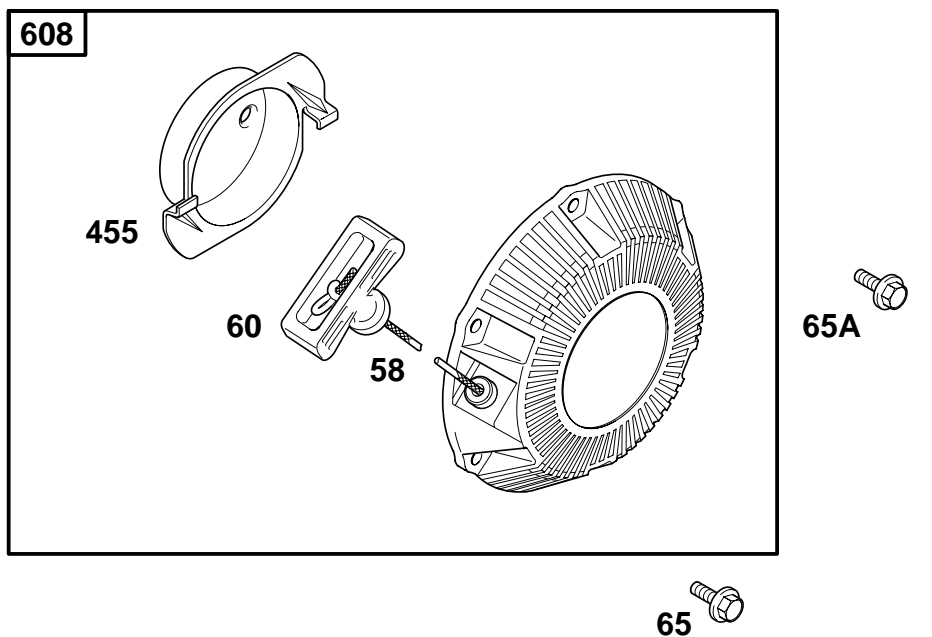

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
58	711539	Rope-Starter	65	710976	Screw (Rewind Starter) (Qty. 2)	455	711541	Cup-Flywheel
60	711540	Grip-Starter Rope	65A	710057	Screw (Rewind Starter)(Qty.1)	608	715952	Starter-Rewind

★ Included in Engine Gasket Set-Ref. No. 358.


△ Included in Valve Gasket Set-Ref. No. 1095.

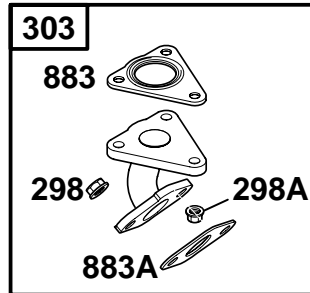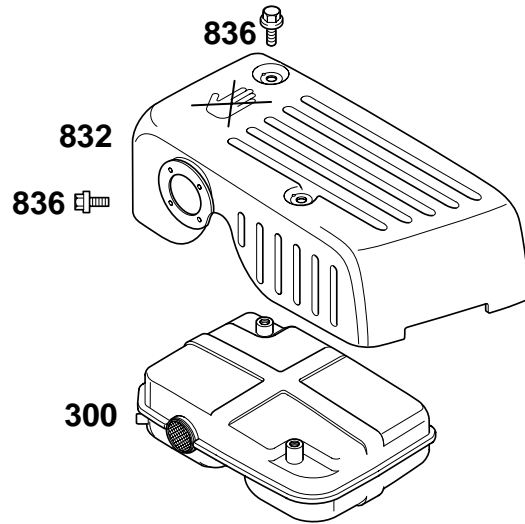

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
298	710090	Locknut-Muffler/Elbow	832	711532	Guard-Muffler	883	Δ★711542	Gasket-Exhaust
298A	710068	Locknut-Muffler/Elbow	836	710074	Screw (Muffler Guard)	883A	Δ★711244	Gasket-Exhaust
300	715948	Muffler						
303	715949	Elbow-Exhaust						

★ Included in Engine Gasket Set-Ref. No. 358.



Δ Included in Valve Gasket Set-Ref. No. 1095.

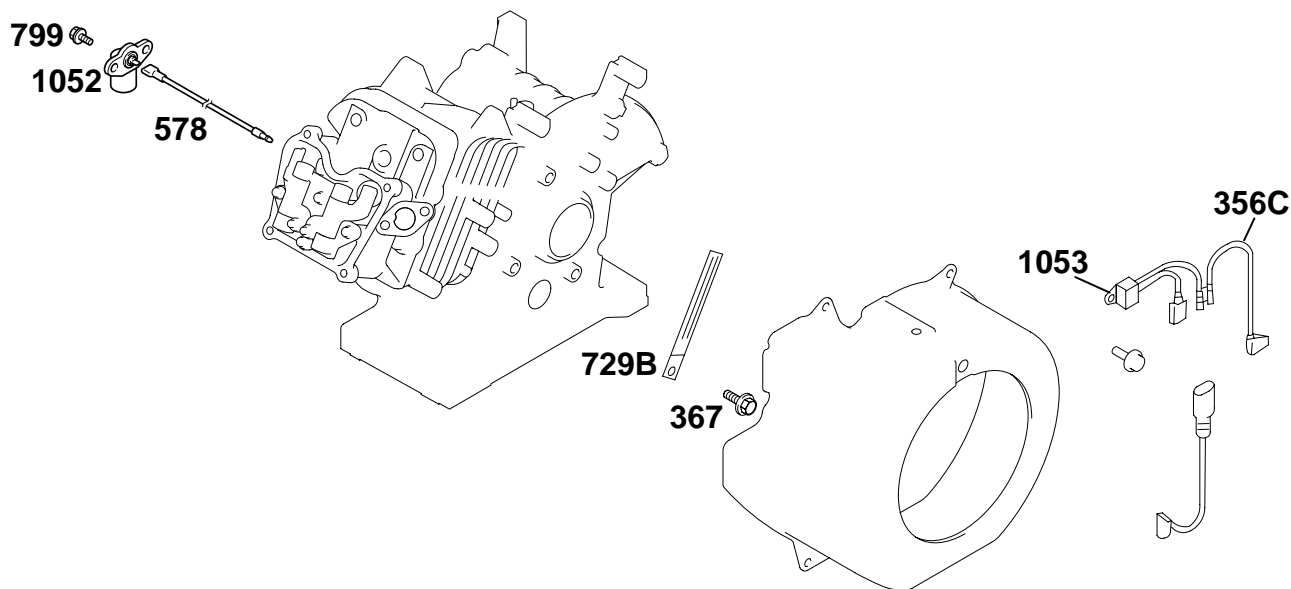

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
356C	711203	Wire-Stop	578	711247	Wire Assembly (Oil Sensor)	799	710057	Screw (Oil Sensor)
367	711427	Screw (Wire Clip)	729B	710407	Clip-Wire	1052	711246	Sensor-Oil
						1053	710305	Module-Oil Gard®

★ Included in Engine Gasket Set-Ref. No. 358.

△ Included in Valve Gasket Set-Ref. No. 1095.

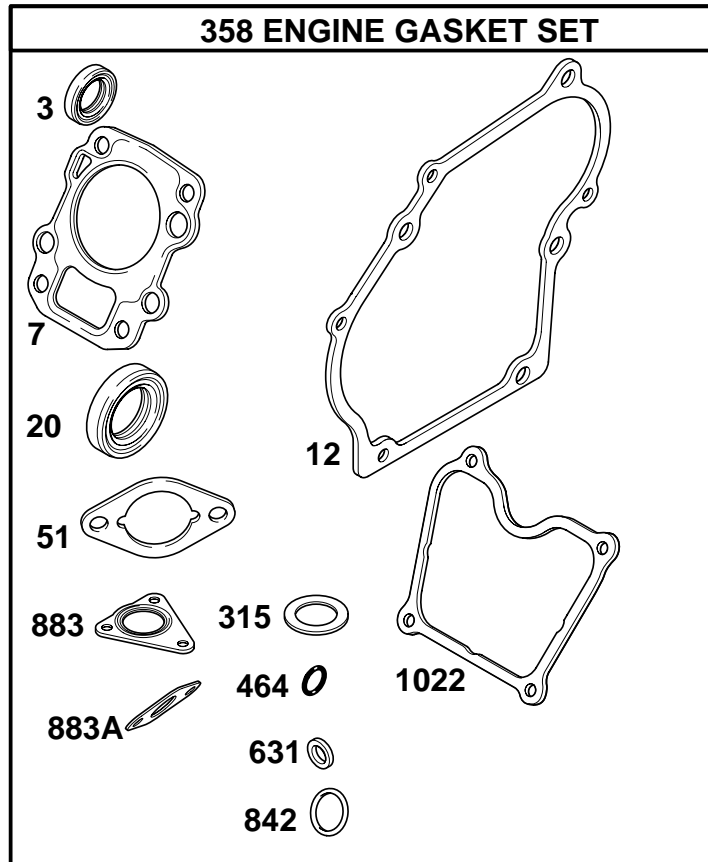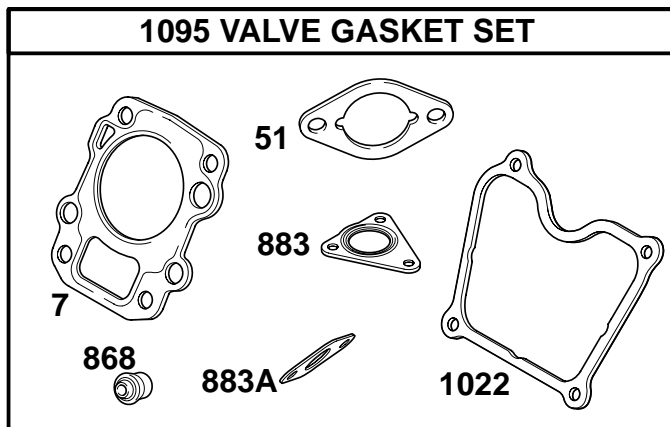

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
3	★711520	Seal-Oil (Magneto Side)	315	★710072	Seal-O-Ring (Filter Bowl)	842	★711521	Seal-O-Ring (Dipstick)
7	Δ★711489	Gasket-Cylinder Head	358	715965	Gasket Set-Engine	868	Δ711287	Seal-Valve
12	★711524	Gasket-Crankcase	464	★710069	Seal-O-Ring (Shut Off Valve)	883	Δ★711542	Gasket-Exhaust
20	★711520	Seal-Oil (PTO Side)	631	★711188	Washer (Oil Drain Plug)	883A	Δ★711244	Gasket-Exhaust
51	★Δ711499	Gasket-Intake				1022	Δ★711490	Gasket-Rocker Cover
						1095	715964	Gasket Set-Valve

★ Included in Engine Gasket Set-Ref. No. 358.

Δ Included in Valve Gasket Set-Ref. No. 1095.