

Illustrated Parts List

Model Series

95200

TYPE NUMBERS
0100 through 0244.

TABLE OF CONTENTS














Air Cleaner	6
Cam	2
Carburetor	4
Controls	5
Crankcase Cover/Sump	3
Crankshaft	2
Cylinder	2
Flywheel	7
Fuel Tank	4
Governor Spring	5
Head	2
Ignition	5
Kits/Gaskets – Carburetor	4
Kits/Gaskets – Engine	2
Kits/Gaskets – Valves	2
Muffler	6
Oil Group	3
Piston Group	2
Rewind Starter	7
Rewind Starter	8
Valves	2



PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

95200

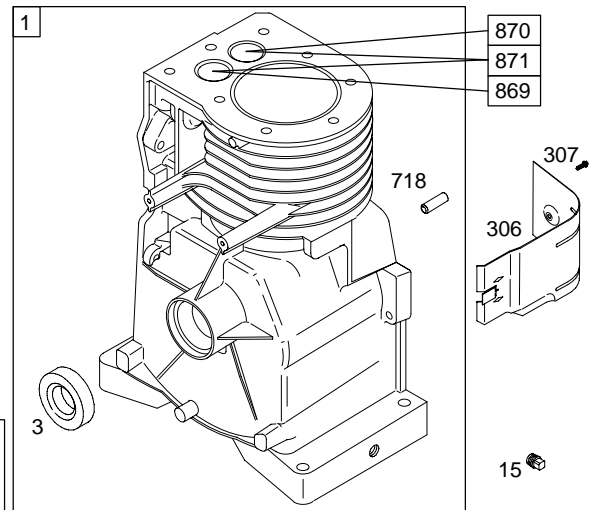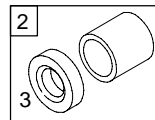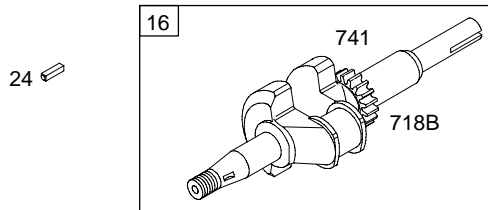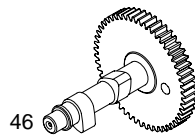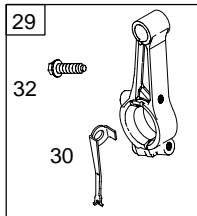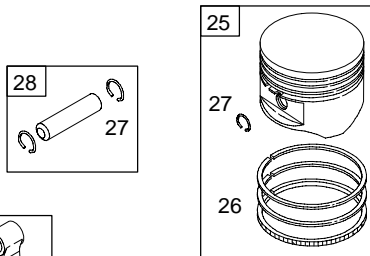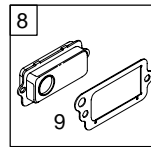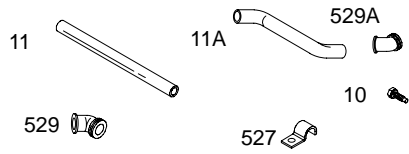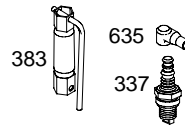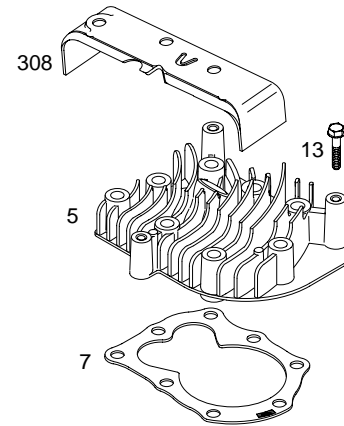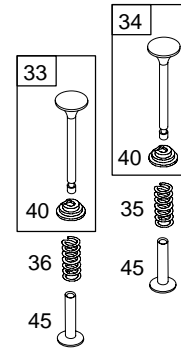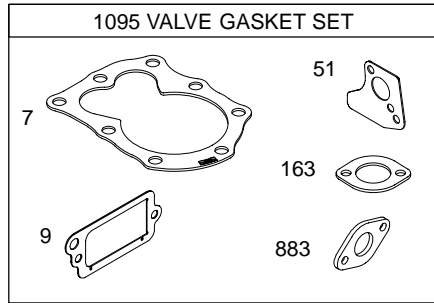
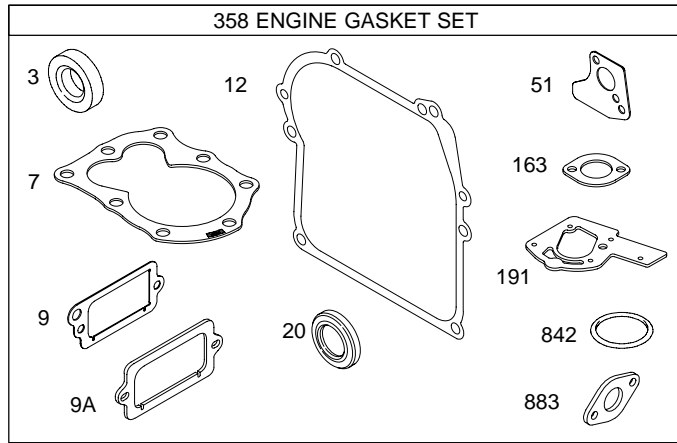


1019 LABEL KIT






1058 OPERATOR'S MANUAL







1330 REPAIR MANUAL



Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

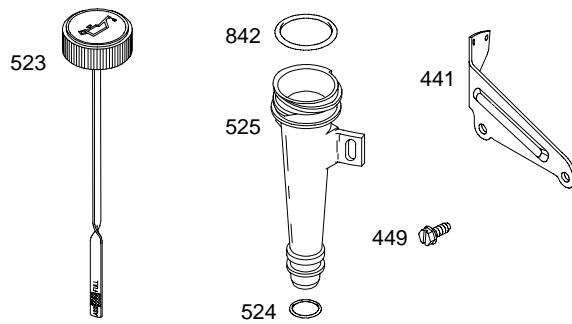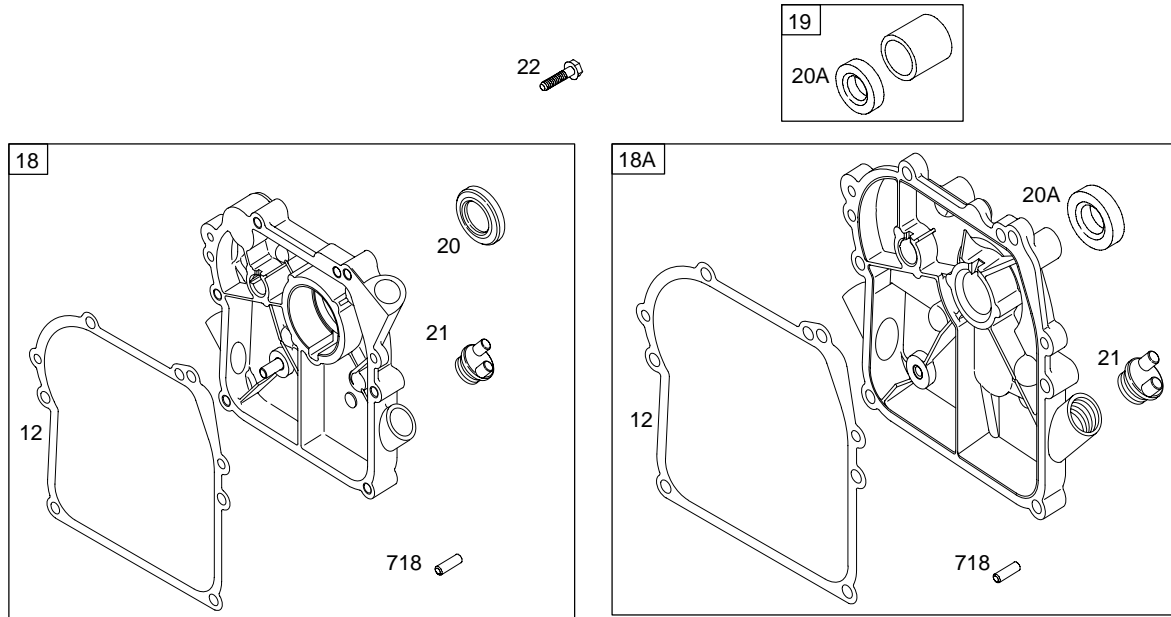





Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
5546-3 Assemblies include all parts shown in frames. 8/13/2003

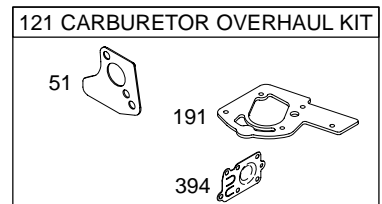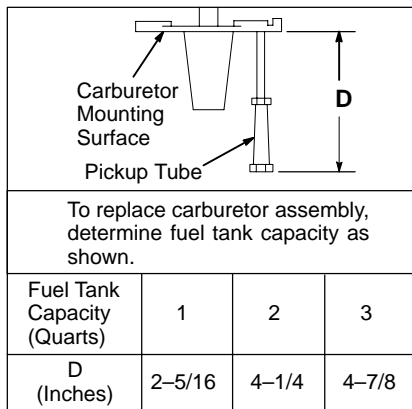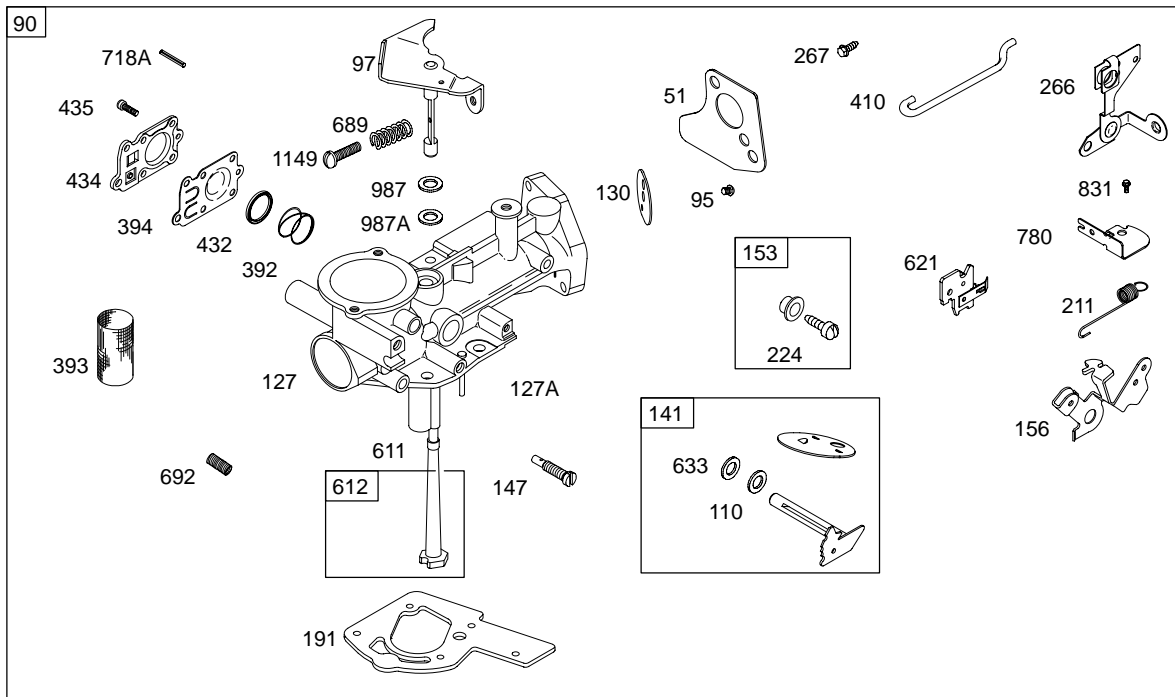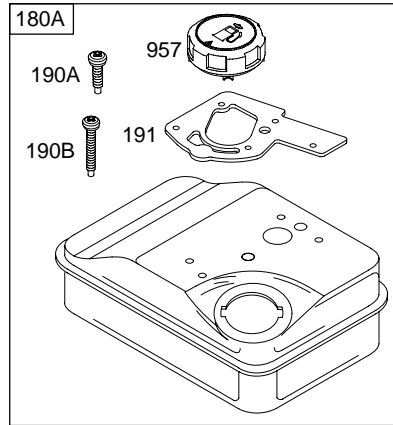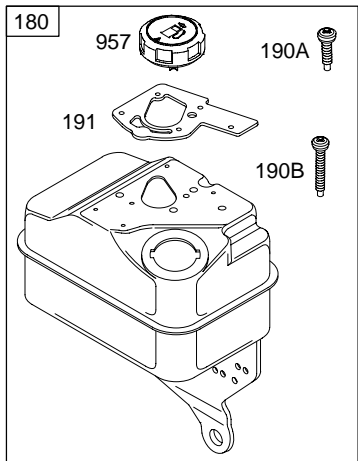

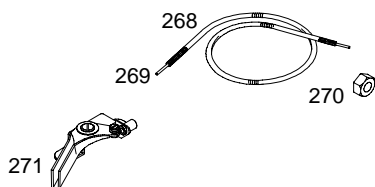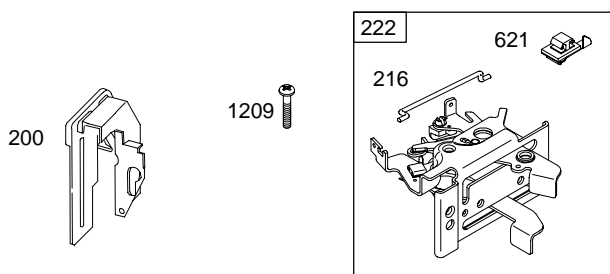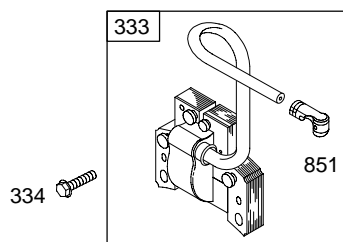

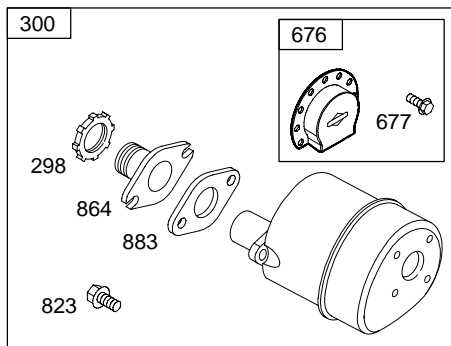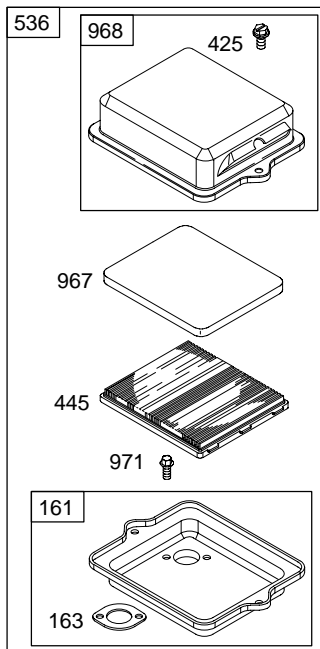

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

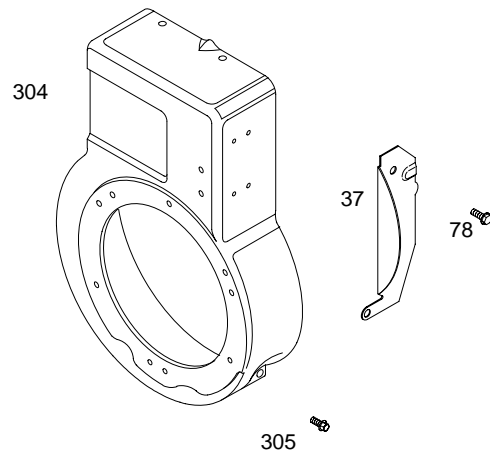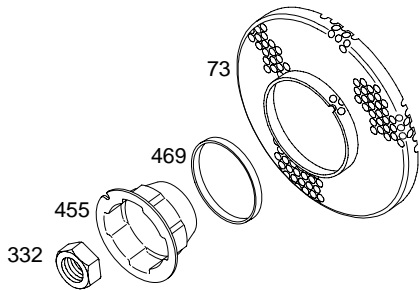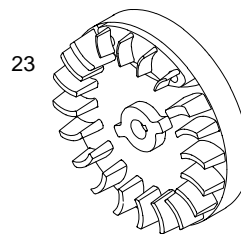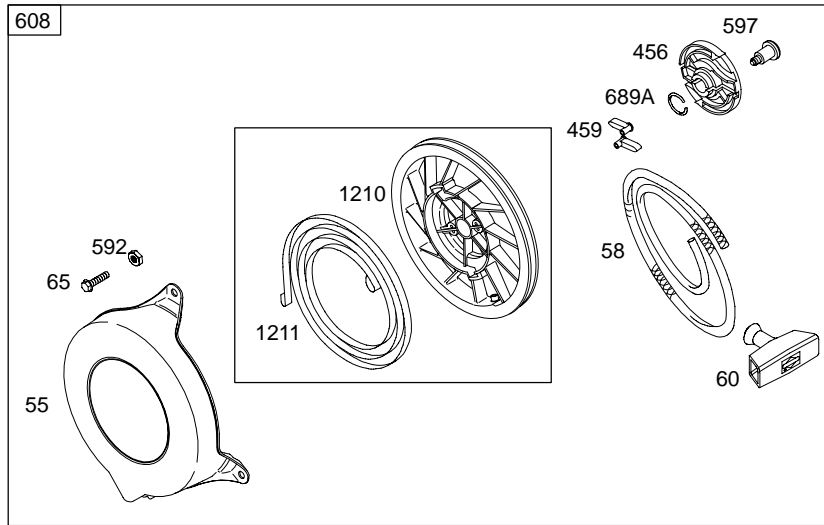

1036 EMISSIONS LABEL

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
5546-7 Assemblies include all parts shown in frames.

95200

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	494549	Cylinder Assembly	18	496679	Cover-Crankcase Used on Type No(s). 0244.	23	496893	Flywheel Used on Type No(s). 0117, 0138, 0194.
2	399269	Kit-Bushing/Seal (Magneto Side)			Note			Note
3	★299819	Seal-Oil (Magneto Side)			497506 Cover-Crankcase			690843 Flywheel Used on Type No(s). 0100, 0244.
5	690386	Head-Cylinder			Used on Type No(s). 0138, 0194.	24	222698	Key-Flywheel
7	★Δ692288	Gasket-Cylinder Head	18A	394820	Cover-Crankcase Used on Type No(s). 0100, 0117.	25	498668	Piston Assembly (Standard)
8	699448	Breather Assembly			19 399269 Kit-Bushing/Seal (PTO Side)			Note
9	Δ★695890	Gasket-Breather			20 ★692020 Seal-Oil (PTO Side) Used on Type No(s). 0138, 0194, 0244.			498669 Piston Assembly (.010" Oversize)
9A	★27549	Gasket-Breather	20A	299819	Seal-Oil (PTO Side) Used on Type No(s). 0100, 0117.			498670 Piston Assembly (.020" Oversize)
10	691666	Screw (Breather Assembly)			21 281658 Cap-Oil Fill			498671 Piston Assembly (.030" Oversize)
11	695258	Tube-Breather			22 691129 Screw (Crankcase Cover/Sump)	26	695169	Ring Set (Standard)
11A	231550	Tube-Breather Used on Type No(s). 0138.			Note			695171 Ring Set (.010" Oversize)
12	★692218	Gasket-Crankcase (.015" Thick) (Standard)			693732 Screw (Crankcase Cover/Sump) (Used In Positions 1 and 6) Used on Type No(s). 0244.			695172 Ring Set (.020" Oversize)
		Note			691128 Screw (Crankcase Cover/Sump) (Used In Positions 1 and 6) Used on Type No(s). 0138, 0194.			695173 Ring Set (.030" Oversize)
		★270895 Gasket-Crankcase/005				27	691588	Lock-Piston Pin
		★270896 Gasket-Crankcase/009				28	298909	Pin-Piston (Standard)
13	691640	Screw (Cylinder Head)						Note
15	691682	Plug-Oil Drain Used on Type No(s). 0117, 0138, 0194.						298908 Pin-Piston (.005" Oversize)
		Note						
		691686 Plug-Oil Drain Used on Type No(s). 0100, 0244.						
16	691474	Crankshaft Used on Type No(s). 0117.						
		Note						
		492880 Crankshaft Used on Type No(s). 0100.						
		493632 Crankshaft Used on Type No(s). 0244.						
		497232 Crankshaft Used on Type No(s). 0138, 0194.						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

Δ Included in Valve Gasket Set-Ref. No.1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
29	294367	Rod-Connecting (Standard) Note 296079 Rod-Connecting (.020" Undersize)	90	499952	Carburetor (2 Quart Tank) (Air Vane) Used on Type No(s). 0117, 0194. Note 499953 Carburetor (3 Quart Tank) (Air Vane) Used on Type No(s). 0100, 0244.	161	694484	Base-Air Cleaner
30	691719	Dipper-Connecting Rod				163	Δ271935	Gasket-Air Cleaner
32	691664	Screw (Connecting Rod)				180	495377	Tank-Fuel (2 Quart) Used on Type No(s). 0117, 0194. Note 495391 Tank-Fuel (3 Quart) Used on Type No(s). 0100, 0244.
33	296676	Valve-Exhaust				180A	495370	Tank-Fuel (1 Quart) Used on Type No(s). 0138.
34	296677	Valve-Intake						
35	690520	Spring-Valve (Intake)				190	691685	Screw (Fuel Tank) Used on Type No(s). 0100, 0117, 0194, 0244.
36	690520	Spring-Valve (Exhaust)	95	691437	Screw (Throttle Valve)	190A	692200	Screw (Fuel Tank)
37	690463	Guard-Flywheel	97	692018	Shaft-Throttle	190B	691687	Screw (Fuel Tank) Used on Type No(s). 0117, 0194.
40	692194	Retainer-Valve	110	690401	Washer (Choke Shaft)	191	●*692241	Gasket-Fuel Tank
45	691762	Tappet-Valve	121	495606	Kit-Carburetor Overhaul	200	498770	Blade-Governor
46	691998	Camshaft	127	691718	Plug-Welch (Carburetor Body)	201	691305	Link-Air Vane
51Δ●*273113		Gasket-Intake	127A	691742	Plug-Welch (Mixing Chamber)	209	692205	Spring-Governor (No Color) Used on Type No(s). 0100, 0117. Note 690563 Spring-Governor (White) Used on Type No(s). 0138, 0194, 0244.
55	692144	Housing-Rewind Starter	130	691743	Valve-Throttle	211	691289	Spring-Governed Idle
58	691921	Rope-Starter	141	497230	Kit-Choke Shaft	216	692904	Link-Choke
60	691915	Grip-Starter Rope	147	691250	Jet-Pilot	222	699132	Bracket-Control
65	690837	Screw (Rewind Starter)	153	490501	Kit-Collar/Screw Used on Type No(s). 0138.	224	690230	Screw (Collar/Screw Kit) Used on Type No(s). 0138.
73	694018	Screen-Rotating	156	692651	Lever-Speed Adjuster Used on Type No(s). 0138.			
78	690364	Screw (Flywheel Guard)						

★ Engine Gasket Set-Reference 358.
● Carburetor Overhaul Kit-Reference 121.

◆ Carburetor Gasket Set-Reference 977.
Δ Valve Gasket Set-Reference 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

95200

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
266	691414	Control-Throttle Used on Type No(s). 0138.	425	694515	Screw (Air Cleaner Cover)	608	499706	Starter-Rewind
267	691082	Screw (Casing Clamp)	432	690766	Cap-Spring	611	690507	Pipe-Fuel Used on Type No(s). 0117, 0194.
268	691025	Casing-Control Wire (Cut to Required Length)	434	691713	Cover-Diaphragm			Note
269	691026	Wire-Control (Cut to Required Length)	435	691619	Screw (Diaphragm Cover)			691770 Pipe-Fuel Used on Type No(s). 0100, 0244.
270	691027	Nut (Control Wire Casing)	441	690484	Bracket-Oil Fill Used on Type No(s). 0138, 0194.	612	391813	Tube-Pick Up Used on Type No(s). 0100, 0117, 0194, 0244.
271	691028	Lever-Control	445	491588	Filter-Air Cleaner Cartridge			Note
298	691720	Locknut-Muffler/Elbow	449	691693	Screw (Oil Fill Bracket) Used on Type No(s). 0138, 0194.			297219 Tube-Pick Up Used on Type No(s). 0138.
300	493288	Muffler	455	691236	Cup-Flywheel	621	692310	Switch-Stop
304	693004	Housing-Blower	456	692299	Plate-Pawl Friction	633	691869	Seal-Choke/Throttle Shaft
305	692198	Screw (Blower Housing)	459	281505	Pawl-Ratchet	635	66538	Boot-Spark Plug
306	690461	Shield-Cylinder	469	694420	Ring-Rotating Trim	676	393756	Deflector-Muffler Used on Type No(s). 0117.
307	691660	Screw (Cylinder Shield)	523	495264	Dipstick Used on Type No(s). 0138, 0194.			Note
308	690462	Cover-Cylinder Head	524	691870	Seal-Dipstick Tube			397931 Deflector- Muffler Used on Type No(s). 0100.
332	690662	Nut (Flywheel)	525	694426	Tube-Dipstick Used on Type No(s). 0138, 0194.			393760 Deflector- Muffler Used on Type No(s). 0138., 0194.
333	496914	Armature-Magneto	527	691741	Clamp-Tube	677	690661	Screw (Muffler Deflector)
334	691061	Screw (Magneto Armature)	529	692189	Grommet (90 Degree) Used on Type No(s). 0138.	689	691783	Spring-Friction (Throttle Shaft)
337	802592	Plug-Spark	529A	692187	Grommet (45 Degree)	689A	691855	Spring-Friction (Rewind Starter)
356	691418	Wire-Stop Used on Type No(s). 0100.	536	494279	Cleaner-Air	692	690572	Spring-Detent
356A	692390	Wire-Stop	578	696031	Wire Assembly Used on Type No(s). 0100.			
358	298989	Gasket Set-Engine	592	690800	Nut (Rewind Starter)			
363	19069	Puller-Flywheel	597	691696	Screw (Pawl Friction Plate)			
383	89838	Wrench-Spark Plug						
392	691823	Spring-Pump Diaphragm						
393	691213	Screen-Carburetor						
394	●272538	Diaphragm-Carburetor						
410	691274	Link-Control Used on Type No(s). 0138.						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
718	690959	Pin-Locating	883	★691314	Gasket-Exhaust	1058	274778	Operator's Manual
718A	690296	Pin-Locating (Carburetor)	957	494559	Cap-Fuel Tank	1095	699450	Gasket Set-Valve
718B	499047	Pin-Locating (Crankshaft)	967	491435	Filter-Pre Cleaner	1149	691624	Screw (Throttle Shaft)
741	691805	Gear-Timing	968	692321	Cover-Air Cleaner	1209	692200	Screw (Speed Control Panel)
780	691211	Anchor-Spring	971	690370	Screw (Air Cleaner Base to Carburetor)	1210	499901	Pulley/Spring Assembly (Pulley)
823	692336	Screw (Muffler Adapter)	987	692279	Seal-Throttle Shaft	1211	499901	Pulley/Spring Assembly (Spring)
831	691099	Screw (Spring Anchor)	987A	270167	Seal-Throttle Shaft	1330	270962	Repair Manual
842	★691876	Seal-O Ring (Dipstick Tube)	1019	699456	Kit-Label			
851	493880	Terminal-Spark Plug	1036	696764	Label-Emissions (Used After Code Date 01093000).			
864	690776	Adapter-Muffler			Note			
869	691701	Seat-Valve (Intake)			695097 Label- Emissions (Used Before Code Date 01100100).			
870	691702	Seat-Valve (Exhaust)						
871	262001	Bushing-Valve Guide (Exhaust)						
		Note						
		231348 Bushing-Valve Guide (Exhaust)						

★ Engine Gasket Set-Reference 358.
● Carburetor Overhaul Kit-Reference 121.

◆ Carburetor Gasket Set-Reference 977.
△ Valve Gasket Set-Reference 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.